

First Alert®

BRK SERIES

H.264 DIGITAL DVR

USER'S MANUAL

MODEL

PRO-D1610 16 Channel DVR



H.264
VIDEO
COMPRESSION

REC
DIGITAL DVR
RECORDER

**MOBILE PHONE/
WEB READY**

1.0TB
DVR OPTIMIZED
SATA HDD



WELCOME

Thank you for choosing First Alert for your security needs!

For more than half a century, First Alert has made the home-safety and security products that make your job easier. Our products are built to the highest standard which has earned us a leadership role in the home-safety and security product categories. We are committed to serving our customers, from the professionals who install our products, to the families and businesses who count on them. First Alert has been helping families and businesses stay safe for over 50 years. By having a First Alert Security System, you're taking the first step in protecting your home or business from damage or theft. We're watching, even when you're not.

This manual is written for the PRO-D1610 DVR. It was accurate at the time it was completed. However, because of our ongoing effort to constantly improve our products, additional features and functions may have been added since that time and on-screen displays may change. We encourage you to visit our website at www.brkelectronics.com to check for the latest manuals (English and Spanish), firmware updates, downloads, other security camera products and announcements. You'll find this product line under Products >> Security Cameras >> Wired Cameras.

©2011 BRK Brands, Inc.

a Jarden Corporation company (NYSE: JAH)

www.brkelectronics.com

All rights reserved. Distributed by BRK Brands, Inc. 3901 Liberty Street Road, Aurora, IL 60504-8122. Due to continuing product development, the product inside the packaging may look slightly different than the one on the package.

BRK Brands, Inc. is a subsidiary of Jarden Corporation (NYSE: JAH). First Alert® is a registered trademark of the First Alert Trust. To obtain warranty service, contact the Consumer Affairs Division at 1-800-323-9005, Monday through Friday, 7:30 a.m. - 5 p.m., Central Standard Time.

Made in China

MAIN DESCRIPTION

Sixteen channel H.264 digital video recorder with Internet remote surveillance, motion detection, PTZ and alarm control suitable for applications such as high-end residential - new or remodel, light commercial, small business/retail, small warehouse or small grocery.

PRODUCT FEATURES

- H.264 Compression & Virus free Linux O/S
- Real hexaplex operation - simultaneous record, playback, mobile phone live view, backup, control, & remote access
- 1 TB SATA hard drive installed
- Supports smart phone live view & E-mail alarm
- Customizable E-mail alerts
- Supports 16-channel CIF real-time simultaneous recording
- Supports 4-channel simultaneous playback
- User-friendly interface: 16 bit true color, semi-transparent GUI with notes for selected menu items
- Advanced motion detection activated recording
- 24/7 Scheduled Recording
- Network monitoring through internet access
- Supports USB or external DVD backup
- Hi-speed backup/upgrade/record via USB2.0
- PTZ camera control

INTRODUCTION

TABLE OF CONTENTS

SECTION	DESCRIPTION	PAGE NUMBER
1	Introduction	2-3
2	Safety	6
3	Product Overview	7
	What is in the Box	7
	DVR Controls	
	Front Panel	8
	Back Panel	9
	Remote Control	10
	Mouse Controls	11
	Camera Power Connections	12
	Connecting Devices	12
4	Initial Setup - System Operation	13
	System Start Up	13
	Default Video Output	13
	Power On/Off	13
	User Login	13
	Live View Screen	14
	Quick Access Menu	14
	Main Menu Access	14
	Password Setup and User Permissions	15
	Camera Display Setup	16
	Display, Video/Audio	16
	Language, Date and Time	17
	Language, Date/Time and Daylight Savings Time (DST)	17
5	Basic Operation	18
	Recording	18
	Configure Recording Options	18
	Recording Schedule (Timer Recording)	18
	Recording Schedule (TIMER RECORD) Example	19
	Privacy Mask Field	19
	Motion Detect Setup	19
	Playback	20
	Playback and Record Search	20
	On-Screen Playback Controls	20
	File List	21
	Backup	21
	HDD Management	21-22

INTRODUCTION

TABLE OF CONTENTS

SECTION	DESCRIPTION	PAGE NUMBER
6	Advanced Operation	22
	Alarm	22-23
	Alarm Setup	22-23
	E-mail Setup	23
	System Info and System Update	24
	System Maintain	24
	Upgrade Firmware	24
	PTZ Setup and Control	25-26
	Step 1: Connect your PTZ Camera to this DVR	25
	Step 2: Configure PTZ Communication Settings	25
7	Remote Access	27
	Network Setup for Remote Access	27
	DHCP (Dynamic Host Configuration Protocol)	27
	Static IP	27
	UPnP (Universal Plug and Play)	28
	PPPoE (Point-to-Point Protocol Over Ethernet)	28
	DDNS (Dynamic Domain Name Service)	29-30
	Port Forwarding	30-32
	Remote Surveillance	33
	Remote Surveillance using Internet Explorer 8	33-34
8	Mobile Phone	41
	Mobile Setup	41
	Windows Mobile Pro (6.0 or later) OS Phones	41-42
	Symbian (S60 3rd or later) OS Phones	43-44
	Android 1.5 Mobile OS Phones	45-46
	Apple iPhone on 3G Networks OS Phones	47
	Blackberry OS 5.0 Phones (Curve 8900, Bold 9700, Tour 9630)	48-49
	Appendix	50
	Hard Drive Removal and Installation	50
	Specifications	51
FAQ's (Frequently Asked Questions)	52-53	
Troubleshooting	54	
Warranty	55	

SAFETY

CAUTION STATEMENTS

SAFETY PRECAUTIONS

- Do not drop, puncture, or disassemble the DVR.
- Do not tug on the power adapter. Use the plug to remove it from the wall.
- Do not expose the DVR to high temperatures.
- For your own safety, avoid using the DVR when there is a storm or lightning in your area.
- Use the DVR with care. Avoid pressing hard on the DVR body.
- Do not crush or damage the power cable.

FCC COMPLIANCE

FCC Compliance Class B Digital Device

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that of the receiver.
- Consult the dealer or an experienced radio or TV technician for help.

Notice: Only peripherals complying with FCC class B limits may be attached to this equipment. Operation with non-compliant peripherals or peripherals not recommended by First Alert / BRK Brands, Inc. is likely to result in interference to radio and TV reception. Changes or modifications to the product, not expressly approved by First Alert / BRK Brands, Inc., could void the user's authority to operate the equipment.

Important: The information shown in the FCC Declaration of Conformity paragraph below is a requirement of the FCC and is intended to supply you with information regarding the FCC approval of this device. The phone number listed below is for FCC related questions only and not intended for questions regarding the connection or operation for this device.

FCC Declaration of Conformity for devices with the FCC logo. Responsible Party: First Alert / BRK Brands, Inc., 3901 Liberty Street Rd., Aurora, IL. 60504-8122. Telephone: (630) 851 - 7330. Product / Model: PRO-D1610.

We, First Alert / BRK Brands, Inc. declare under our sole responsibility that the device to which this declaration relates: Complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Certification (if applicable)

This device contains a radio transmitter. Accordingly, it has been certified as compliant with 47 CFR Part 15 of the FCC Rules for intentional radiators. Products that contain a radio transmitter are labeled with an FCC ID.

FIRE AND ELECTRIC SHOCK HAZARD STATEMENT



CAUTION

RISK OF ELECTRIC SHOCK



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK. UNPLUG ALL POWER SOURCES, INCLUDING CAMERAS FROM THE DVR BEFORE REMOVING COVER. FAILURE TO DO SO CAN RESULT IN DAMAGE TO THE DVR OR ITS COMPONENTS AS WELL AS INJURY OR DEATH.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF THE PLUG TO THE WIDE SLOT AND FULLY INSERT



Caution!

When working with electrostatic sensitive devices such as hard disk or DVR unit, make sure you use a static-free workstation. Any electrostatic energy coming in contact with the hard disk or DVR can damage it permanently.

DISPOSAL




These symbols indicate that it is prohibited to dispose of these batteries in the household waste. Take spent batteries that can no longer be charged to the designated collection points in your community.

PRODUCT OVERVIEW

PACKAGE CONTENTS

WHAT'S IN THE BOX

PRO-D1610 H.264
16 Channel Digital DVR
with 1TB Hard Drive

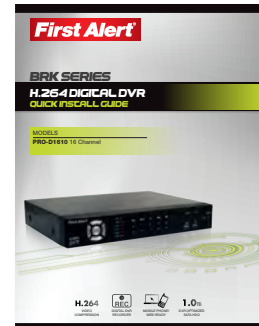

Quick Install Guide



Installation Software
and Manuals



USB 2.0 Mouse



Remote Control



Power Supply for DVR



2 Window
Warning Decals




RJ45 Ethernet Cable
(cable color may be different)

PRODUCT OVERVIEW

DVR CONTROLS

FRONT PANEL

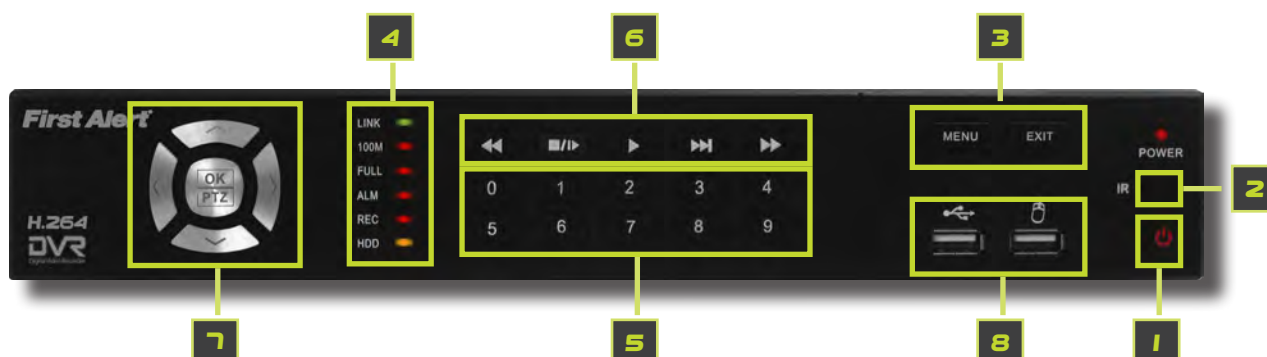


ITEM	FUNCTION	CONTROL	DESCRIPTION
1	Standby		Press to enter/exit standby mode
2	IR Sensor		IR receiver for the remote control
3	MENU/EXIT		Press to open/close the main menu
4	LED Indicators		Shows status of Link, 100M, Full, Alarm, Record, HDD.
5	Channel Numbers	0-9	Press buttons 1~9 to view the selected channel in full-screen. To display 2-digit channels press both buttons slowly. Pressing 0 returns screen to 16 camera display mode.
6	During playback, press the following:	 	<p>Increase reverse playback speed 2X, 4X, 8X</p> <p>Press to freeze playback to one frame, then press again to advance frame-by-frame</p> <p>Press to start playback</p> <p>Press to slow playback speed by 1/2, 1/4, 1/8</p> <p>Press to increase forward playback speed 2X, 4X, 8X</p>
7	Navigation/OK/PTZ (Select direction arrow, then press OK to start PTZ motion)	 	<p>In menus, press to confirm selections; in PTZ mode, press to change the navigation buttons to control the connected PTZ camera (not included)</p> <p>Press to move cursor up; in PTZ mode, press to pan camera up</p> <p>Press to move cursor down; in PTZ mode, press to pan camera down</p> <p>Press to move cursor left; in PTZ mode, press to pan camera left</p> <p>Press to move cursor right; in PTZ mode, press to pan camera right</p>
8	USB		Connect a USB flash drive to the left port for data backup and firmware upgrades. Connect a USB mouse to the right port

PRODUCT OVERVIEW

DVR CONTROLS

BACK PANEL

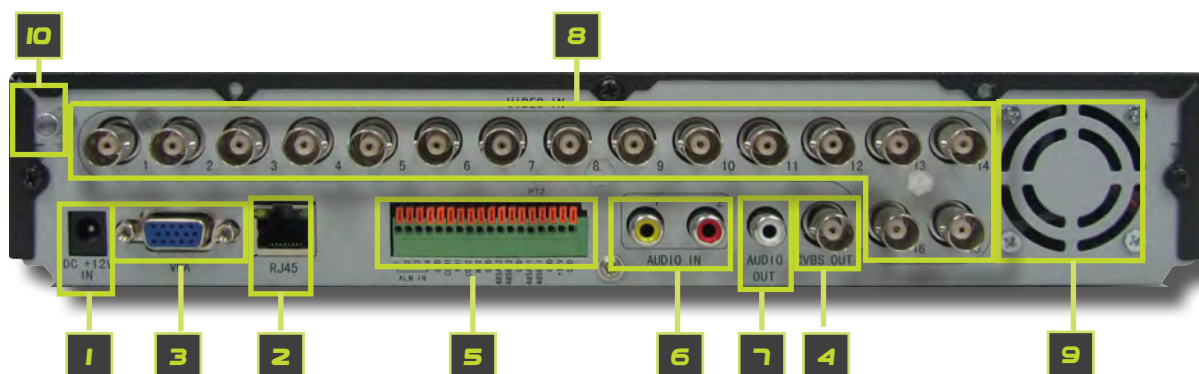

ITEM	FUNCTION	DESCRIPTION
1	POWER Input	DC 12V/3A power connection
2	Network	For connecting RJ45 ethernet cable to PC or router
3	VGA Output	For connecting to a VGA monitor
4	Video Output	For connecting to a BNC monitor (800 x 600) - NTSC or PAL
5	Alarm Input	4 alarm inputs
	Alarm Output	2 alarm outputs
	RS485	For connecting PTZ cameras
	+12V	Power supply for alarm block inputs, the current is 100mA (to prevent short circuits)
6	Audio Input	For connecting audio signal from audio capable cameras or self powered microphones (RCA jacks)
7	Audio Output	For connecting audio signal to amplified speakers (RCA jacks)
8	Video Input	For connecting video signal from cameras (BNC)
9	Fan	Cooling fan
10	Ground	Ground connection












PRODUCT OVERVIEW

REMOTE CONTROL

REMOTE CONTROL

Remote Control Operation

The remote control is the secondary input device for navigating the system's interface. In device operation, the OK key has the same function as "left click" of the mouse.

ITEM	FUNCTION	DESCRIPTION
1	STANDBY	Press to turn standby mode ON/OFF
2	LOGIN/LOCK	If "Security" has been enabled in the setup menu, press to open the user password login screen or log off system.
3	Number/Channel Buttons	Press buttons 1~9 to view the selected channel in full-screen. To display 2-digit channels press both buttons slowly. Pressing 0 returns screen to 16 camera display.
4	Window Display	 Toggle between split-screen displays: Channels 1-4, 5-8, 9-12, 13-16, 1-9, 8-16, 1-16
5	MENU	Opens the main menu
6	PTZ	Press to open the PTZ control window
7	EXIT	Close menu windows
8	Navigation/OK (Select direction arrow, then press OK to start PTZ motion)	 In menus, press to confirm selections; in PTZ mode, press to change the navigation buttons to control the connected PTZ camera (not included)
		 Press to move cursor up; in PTZ mode, press to pan camera up
		 Press to move cursor down; in PTZ mode, press to pan camera down
		 Press to move cursor left; in PTZ mode, press to pan camera left
		 Press to move cursor right; in PTZ mode, press to pan camera right
9	+ / -	In menus, press to adjust values
10	RECORD	Press to start manual recording
11	STOP	Press to stop manual recording
12	EXTRA	For future use
13	Playback Controls	 Increase reverse playback speed 2X, 4X, 8X
		 Press to freeze playback to one frame, then press again to advance frame-by-frame
		 Press to start playback
		 Press to slow playback speed by 1/2, 1/4, 1/8
		 Press to increase forward playback speed 2X, 4X, 8X



Remote Control

TIP: When using the remote control to enter password and camera titles, select the field using the navigation buttons, press OK, and then press the number buttons.



Battery Replacement - Instructions for Use

Always purchase the correct size and grade of battery most suitable for intended use. Replace all batteries of a set at the same time. Clean the battery contacts and also those of the device prior to battery installation. Ensure the batteries are installed correctly with regard to polarity (+ and -). Remove batteries from equipment that is not to be used for an extended period of time. Remove used batteries promptly.

PRODUCT OVERVIEW

MOUSE AND VIRTUAL KEYPAD

MOUSE CONTROLS

Mouse Operation with this DVR

The mouse is the primary input device for navigating system menus.

NOTE: Unless otherwise noted, all system functions described in this manual are achieved through mouse input.

To use a mouse with the system:

Connect a USB mouse to the USB MOUSE port on front panel of the system.

NOTE: Only the USB 2.0 port on the front panel is designed for data backup to a USB flash drive. Do not connect a USB flash drive to the USB MOUSE port.

Use the mouse buttons to perform the following:

1 Left-Button:

- Click to select a menu option
- During live viewing in split-screen double-click on a channel to view the selected channel in full-screen
- Double-click the channel again to return to split-screen view
- Selecting letter or number on the virtual keypad

2 Right-Button:


- Click to open the Quick Access Menu
- Exits any window
- Exits any menu or re-opens previous menu

3 Scroll-Wheel:

- Forward-switch to VGA; backward-switch to BNC (CVBS)



DVR Front Face
Connect Mouse &
USB Drive

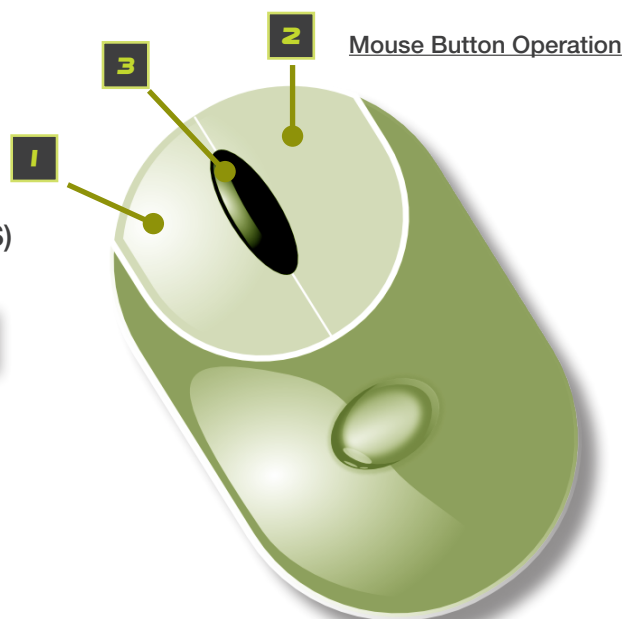

VIRTUAL KEYPAD

Virtual Keypad

To enter text or numerical data, the system uses a virtual keypad. In fields where letters or numbers can be entered, you can switch between various formats – numbers, numbers & symbols, upper case (ABC) and lower case (abc). Note you can access all numbers when in the “Letters” virtual keypads. See below.



Letters-Uppercase



Letters-Lowercase



Numbers



Numbers & Symbols

PRODUCT OVERVIEW

CAMERA AND POWER CONNECTIONS

CONNECTING DEVICES

Follow this diagram to make device connections. This diagram is for illustration purposes only. Cabling and other accessories shown are not included with this DVR unless indicated. See "What's in the Box" for included devices.

DVR Front Face
Connect Mouse &
USB Drive



Powering Cameras
Power from a single
Power Adaptor and 8-way
splitter. 2 required.
Not included.

DC Converter - 12V

Note: To reduce the number of single camera power adaptors required, you may be able to use a larger power adaptor (3A or 5A) and a splitter cable. Contact your local security camera accessories dealer for help in matching splitter, cable, camera and power adaptor requirements.

Power to Cameras

Power from 120V

Splitter - 8 camera

Powering Cameras

Power from each Camera Adaptor that came with your camera.
Not included

Power from 120V

12V DC Converter

Power to 1 to 16 Cameras

BNC Video/DC Power Cable:
(1 per Camera). Note: Cables,
Power Adaptors and Cameras
not included

To each DVR
Channel 1-16

Video to Camera

Power to Camera

Power from 120V

DC Converter - 12V
(included with this DVR)

Power to DVR

VGA to PC Monitor or TV
(Monitor and Cable Not included)



Smartphone through Mobile
Internet Setup
(Smartphone Not
included)

RJ45 Ethernet
to Router and
Internet

PTZ & Alarm Connections
(Cameras not included)

RCA Audio In from
2 Audio Cameras or
Powered Microphone
(Not included)


BNC to Security Camera Monitor
(Monitor and Cable Not included)

RCA Audio Out to
Powered Speakers
(Not included)

SYSTEM START UP

Default Video Output

The default video output for the DVR system is VGA. If you connect a BNC (CVBS) monitor on initial setup, you will need to use the mouse “Scroll Wheel” to switch to the BNC output to be able to use the mouse. Roll the mouse “Scroll Wheel” backward to go to BNC and forward to go to VGA. The REMARK screen is shown on startup.

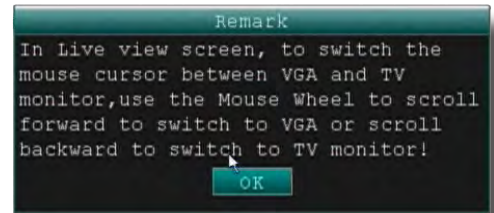

Switch between VGA to BNC Output

Power On/Off

To power the system On/Off, connect the power cable to the DC 12V port on the rear panel. At startup, the system performs a basic system check and runs an initial loading sequence. After a few moments, the system loads a live display view.



Standby Mode

The system can also be put into Standby Mode. Power will remain to the system but will not be recording. To start/stop Standby Mode:

1. Press and hold the POWER button on the front panel or the STANDBY button on the remote control until the prompt closes. The system enters standby mode. You can also enter Standby mode through the Quick Access Menu. See next page.
2. To exit standby mode, press and hold the POWER button on the front panel or remote control until the system beeps. The system will begin powering up.



Power/Standby Switch



Standby Mode

User Login

Password

ATTENTION: By default, passwords are disabled on the system. You do not need to enter a password when accessing any system menus. However, for security purposes, it is highly recommended to enable passwords on the system using the Password Menu. See “Password” section for details on setting up passwords. Click APPLY to access the menus or click EXIT to cancel password setup and return to the LIVE VIEW screen.



User Login Menu

INITIAL SETUP

SYSTEM OPERATION

Live View Screen

The Live View Screen is the home or main viewing screen. It shows live video of all current cameras connected to the DVR. You can double-click a channel at any time to view it in single-channel mode. You access all menus from this Live View screen via the Quick Access Menu. You will also see the Channel number or name, time and day information (see page 16 "Camera Display Setup" for customizing the Live View Screen). It is also where you will see various information and warning icons, depending on what is happening in the system or with the alarms that may be set.

- [R]** means the channel is recording
- [M]** means motion detection alarm activated on the channel
- [I]** means an input on the alarm block activated on the channel
- [H]** means either the hard drive is not installed, it is bad or it is full



Main Viewing Screen
Showing No HDD in DVR




Quick Access Menu

Quick Access Menu

When using the mouse, use the Quick Access Menu to access several system options, including the Main Menu. Select one of the following options:

- MAIN MENU: Opens the main system menu
- MENU LOCK: Logs current user off the system. Re-login required.
- MULTIPICTURE: Configures Channels to display in Live View
- PTZ : Opens the PTZ control menu
- VIDEO SEARCH: Open the Search Menu to view recorded video
- MUTE: Mute listen-in audio on the system. Recording of audio is still enabled.
- START RECORD: Start manual recording
- STOP RECORD: Stop manual recording
- START CRUISE or STOP CRUISE: Toggles between both commands. Click to start preset PTZ Camera motion. When Cruise is started and you bring up this Quick Access Menu again, the option will now show STOP CRUISE.
- STANDBY: Puts system in standby mode.
- VIDEO SEQUENCE: Rotates through ONE CHANNEL, FOUR CHANNEL and NINE CHANNEL Live View Screens

To close the Sub-Menu, left click anywhere on-screen.

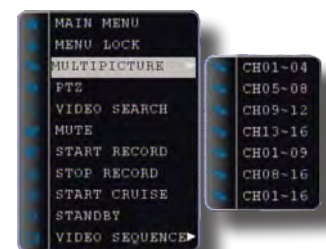

Quick Access Menu-
Multipicture

Main Menu Access

To open the Main Menu: Right-click anywhere on-screen to open the Quick Access Menu and select MAIN MENU (mouse only), or press the MENU button on the remote control or front panel of the system.

NOTE: If passwords are enabled on the system, you need enter the 1-8 digit numerical password to open the Main Menu.

Main Menu

1. DISPLAY: Configure Display Setup
2. RECORD: Configure recording parameters (quality, resolution), set record modes, and enable/disable audio recording. Note: Audio capable cameras (not included) are required for audio recording on the system.
3. NETWORK: Configure Network Setup
4. SEARCH: Search for recorded video on the system.
5. DEVICES: Opens DEVICE MANAGEMENT Menu. Configure HDD, ALARM, MOBILE, MOTION and PTZ.
6. SYSTEM: Opens the SYSTEM SETUP Menu, which lets you set the system language, date and time, device IDs and passwords, system maintenance, configure video settings and gather system information like serial number and software version.



Main Menu



No HDD installed

NOTE: If there is no HDD installed, or the HDD is not recognized, or the HDD is not formatted in Live View a red **[H]** will be displayed in the video preview interface. You must format the HDD in the DVR before first use. See: Menu > HDD management > Format. After formatting, the system will restart.

PASSWORD SETUP

Setting Up Passwords & User Permissions

When you first startup your DVR, you are automatically logged in as the ADMIN under Device ID: 000000. By default, passwords are disabled on the system. You will not need a password to log in or access menus. You will not need a password to access your system using the browser-based remote software.

The system employs two levels of user authorities connected to a Device ID. The levels are as follows:

1. ADMIN (administrator): Has full control of the system, and can change both administrator and user passwords and enable/disable password checking
2. USER (normal user): Only has access to live viewing, search, playback, and other limited authorities.

For security reasons, it is highly recommended to enable passwords on your system. If you enable passwords, you must select a 1-8 digit ADMIN password and a 1-8 digit USER password. The ADMIN and USER passwords must not be the same. If you forget your password, contact First Alert Consumer Affairs for help in resetting.

To customize PASSWORD settings, click SYSTEM from the Main Menu, then click PASSWORD. You are now in the User Setup menu. From here you can change the DEVICE ID if desired. Note this is not a required for a basic setup:

1. Device ID: Click the field beside Device ID and enter a 6-digit numerical Device ID using the Virtual Keyboard.

Next, in the USER SETUP Menu click CONFIG to set up users. NOTE: Only the Administrator can enter the CONFIG setup. You can change the

- STATE: active or not (Note for User Set #1, ADMIN, the STATE of ACTIVE or INACTIVE cannot be changed.)
- USER NAME: Assign or change user name using the virtual keyboard.
- PASSWORD ENABLE: enable or disable the password for this user
- PASSWORD: Password must be 1-8 digits
- CONFIRM: confirm the password
- PERMISSION: Select all permissions for this user. (NOTE: this option is not available for ADMIN as they have all permissions). Available choices are: Standby, Record Setup, HDD Manage, Language Setup, Time Setup, Start/Stop Record, Display Setup, Alarm Setup, System Info, Motion Detect, Mobile Setup, System Setup, PTZ Setup, Network Setup, Video/Audio Set, IE Preview (Internet Explorer) for each of 16 Channels, Playback for each of 16 Channels. Navigate the PERMISSION Screens by:
 - NEXT: Moves to next selecting page.
 - ALL: Selects all permissions.
 - CLEAN: Clears all permissions.

NOTE: This page is available for the administrator. The administrator can assign permissions for the user. The user can view but can not change their permissions.

No.	USER NAME	LEVEL	STATE	CONFIG
1	admin	ADMIN	ACTIVE	CONFIG
2	user1	NORMAL	INACTIVE	CONFIG
3	user2	NORMAL	INACTIVE	CONFIG
4	user3	NORMAL	INACTIVE	CONFIG
5	user4	NORMAL	INACTIVE	CONFIG
6	user5	NORMAL	INACTIVE	CONFIG

Buttons: DEFAULT, APPLY, EXIT

User Setup

STATE: ACTIVE

USER NAME: admin

PASSWORD ENABLE: DISABLE

PASSWORD:

CONFIRM:

User name must be 1-8 characters

Buttons: APPLY, EXIT

User Password Setup

USER NAME: user1

<input type="checkbox"/> STANDBY	<input type="checkbox"/> ALARM SETUP
<input type="checkbox"/> RECORD SETUP	<input type="checkbox"/> SYSTEM INFO
<input type="checkbox"/> HDD MANAGE	<input type="checkbox"/> MOTION DETECT
<input type="checkbox"/> LANGUAGE SETUP	<input type="checkbox"/> MOBILE SETUP
<input type="checkbox"/> TIME SETUP	<input type="checkbox"/> SYSTEM SETUP
<input type="checkbox"/> START/STOP REC	<input type="checkbox"/> PTZ SETUP
<input type="checkbox"/> DISPLAY SETUP	<input type="checkbox"/> NETWORK SETUP

Buttons: NEXT, ALL, CLEAN, APPLY, EXIT

User Permission Screen 1

USER NAME: user1

☐ VIDEO AUDIO SET

CH01	CH02	CH03	CH04	CH05	CH06	CH07	CH08
IE VIEW: <input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PLAYBACK: <input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

CH09	CH10	CH11	CH12	CH13	CH14	CH15	CH16
IE VIEW: <input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PLAYBACK: <input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Buttons: PREVIOUS, ALL, CLEAN, APPLY, EXIT

User Permission Screen 2

DEVICE ID: 000000 (000000)

USER NAME: admin

PASSWORD:

Buttons: APPLY, EXIT

User Login-Multi Users

Multi User Login

After Users are set up, Select active user from USER NAME drop down box to log on with previously set up permissions. The active user(s) will be available. Next, key in the device ID and user password.

INITIAL SETUP

SYSTEM OPERATION


CAMERA DISPLAY SETUP

Setting Up Cameras for Viewing and Recording


Use the Display Setup menu to customize channel titles, show/hide the date and time in live viewing and playback, and enable/disable preview channels. To customize Display settings, click DISPLAY from the Main Menu:

Display

- Configure the following options:
 - NAME:** Click any of the fields and enter a new title for the selected channel using the Virtual Keyboard (mouse only)
 - POSITION:** Reposition the channel title; select U-L, D-L, U-R, D-R, where U(UP), D(DOWN), L(LEFT) and R(RIGHT) or OFF. If OFF, the title will not be displayed for the selected channel
 - COLOR:** Adjust CHROMATICITY, LUMINOSITY, CONTRAST, and SATURATION for the selected channel
 - DISPLAY TIME WHILE IN LIVE VIEW:** Select ON/OFF to show/ hide the date and time during live viewing
 - DISPLAY TIME WHILE RECORDING:** Select ON/OFF to show/hide the date and time during playback.
- Scroll down to change the settings for the remaining channels
- Click APPLY to save your settings. Click OK in the REMARK window. Click EXIT.

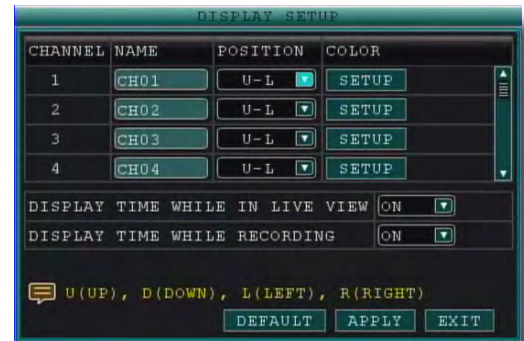

Display Setup Menu

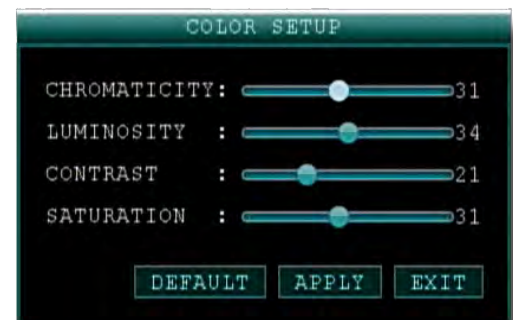

Color Set-up

Video

Use the VIDEO SETUP menu to set the resolution and camera setup on the system. To configure Video options, from the MAIN MENU select SYSTEM then VIDEO:

- Under VIDEO SYSTEM, select NTSC or PAL. (See info box below)
- Under VGA RESOLUTION, select 800 x 600, 1024 x 768, 1280 x 1024, 1366 x 768, 1440 x 900.
- Under LOOP TIME (SECOND), enter with virtual keypad from 1 to 300. Sets the time each channel is visible when VIDEO SEQUENCE from the Quick Access Menu.
- Under ADJUST MARGIN, adjust TOP, BOTTOM, LEFT, RIGHT margin with slider from 0-6. Also adjust Display from VGA or CVBS. Default is VGA and 0 for all margins
- Click APPLY. Click OK in the REMARK window.



Adjust Margin



Video Setup Menu



Audio/Video Recording

Caution: Audio surveillance in some states is illegal or requires permission from one or both parties to record someone's voice. Laws are also different from residential vs. commercial applications. Some federal, state, and local laws prohibit certain surveillance activities and/or the use or distribution of the information obtained from such activities. Prior to using this system, you should become familiar with the pertinent laws to ensure compliance with those applicable to surveillance activities.



NTSC or PAL?

NTSC (National Television Standards Committee) is the video system or standard used in North America and most of South America. In NTSC, 30 frames are transmitted each second. Each frame is made up of 525 individual scan lines.

PAL (Phase Alternating Line) is the predominant video system or standard mostly used overseas. In PAL, 25 frames are transmitted each second. Each frame is made up of 625 individual scan lines.

INITIAL SETUP

SYSTEM OPERATION

SYSTEM SETUP

Use the SYSTEM SETUP Menu to set the system language, date and time, device IDs and passwords, system maintenance, configure video settings and gather system information like serial number and software version.

LANGUAGE, DATE AND TIME

Setting Up Language/Date/Time

Set the system language, date and time, passwords, and configure video options.

Language

To change the system language, from the drop-down menu select LANGUAGE. Click APPLY. Click OK in the confirmation window. NOTE: The system will restart when you finish system language setup. The default is English.



System Language Menu

Date/Time


It is highly recommended to immediately set the date and time when first setting up your system. To set the date and time:

1. Click DATE/TIME and configure the following options:
 - DATE: Enter the day, month, and year.
 - DATE FORMAT: Select DD/MM/YYYY, MM/DD/YYYY, or YYYY/MM/DD
 - TIME: Enter the time
 - TIME FORMAT: Use the drop-down menu and select 12HOURS or 24HOURS. If 12HOURS is selected, then set AM or PM.
 - DST: Use the drop-down menu to select ON/OFF to enable/disable Daylight Savings Time. See below for details on setting DST.
2. Click ZONE to enter your time zone from -12 to +12. To find your time zone visit www.worldtimezone.com or other similar sites. See Info box for US codes.
3. Click SAVE DATE AND TIME. The new date and time are saved. Click EXIT.

Daylight Savings Time (DST)

To set daylight savings time:

1. Under DST, select ON. DST options appear.
2. Under DST MODE select one of the following:
 - DEFAULT: The Default setting will apply the United States daylight savings time period from the second Sunday of March to the first Sunday in November (go to step 3)
 - CUSTOM: Set customized start and end times for DST (go to step 4)
3. If using the DEFAULT, click APPLY. Click EXIT.
4. If setting a CUSTOM DST, use the drop-down menus to select a week and month for the start and end times.
5. Click APPLY. Click OK in the REMARK window.
6. Click EXIT in each menu until all windows are closed.

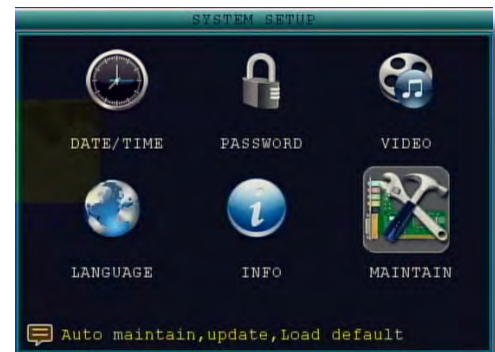

System Setup Menu



US World Time Zones - UTC Codes

UTC stands for Universal Time Coordinates or Greenwich Mean Time (GMT)

Eastern:	-5
Central:	-6
Mountain:	-7
Western:	-8
Alaska/Hawaii:	-9 through -11



System Time/Date Setup



Why Set a Date & Time?

It's important to set the proper date and time before continuing so that you can easily locate recorded events. Inaccurate dates and times on files may affect their admissibility as evidence in court. In addition, when changing current time settings, to avoid possible confusion with the time stamps on recorded and currently recording files, stop all ongoing recording processes before altering the system time and restart recording using the new settings.

BASIC OPERATION

RECORDING

RECORDING

RECORD Mode

Configure Recording Options:

In this Menu you have three recording options: POWER UP (Continuous), TIMER RECORD (enables SCHEDULE menu) and ALARM (within SCHEDULE menu). By default, the DVR is set to record continuously. Set parameters as follows:

1. From the Main Menu click RECORD. Under SWITCH, use the drop-down menus and select ON/OFF to enable/disable recording from the selected channel. Note: If SWITCH is set to OFF, then Motion Detect, Alarm and Manual Record are also disabled for that channel.
2. BITRATE (Kbps): See table for details. Note: Resolution for this DVR is at CIF due to the number of channels.
3. FRAMERATE: Choose the recording frame rate 1-30, (fps – frames per second). The lower the value, the less life-like and more jerky the recorded movements will be. However, a lower frame rate uses less HDD space. Make your choice depending on the precision with which you want to follow the events being recorded. Frame-rate of each channel can be adjusted but is limited by the total resources available. The total frame rate for all channels combined cannot exceed 420 (NTSC) fps. Note: Although the chipset is NTSC 480, part of the resources are used for other internal functions and cannot be allocated to recording resources.

Record Menu

BITRATE IN KBPS			
IMAGE QUALITY	LOW	MEDIUM	HIGH
CIF	384	512	768
HD1	N/A	N/A	N/A
D1	N/A	N/A	N/A

4. AUDIO, select ON or OFF. If audio recording is enabled, the system will record audio from connected audio capable cameras (not included). See caution statement on audio recording in **Video** section.
5. REC. MODE, select POWER UP or TIMER RECORD. If you select POWER UP, the system will record continuously when the system is powered on. If you select TIMER RECORD, you have to set a recording schedule on the system.
6. REC. SIZE (Record Size), select 15MIN, 30MIN, 45MIN, or 60MIN.
NOTE: Record Size sets the file size for recorded video files on the system. Instead of recording data as one large file, the system will divide the data into blocks of 15, 30, 45, or 60 minutes. This makes the recorded data easier to search
7. MASK FIELD lets you block a specific portion of a channel you do not want recorded or shown on the display screen. This can be useful if you need to conceal a sensitive area being captured by the camera. See next section for details.
8. Click APPLY. Click OK in the REMARK window. Click EXIT.

Recording Schedule (TIMER RECORD)

You can program the DVR to record according to a customized recording schedule. The Schedule Grid shows the days of the week and hour blocks 00~23. You can set Alarm Recording (Red), General Recording (Green), or No Recording (Blue) to each time block of each day. To set a recording schedule:

1. Open the Main Menu and click RECORD.
2. Under REC. MODE, select TIMER RECORD.
3. Click SCHEDULE. The Schedule menu opens.
4. Under CHANNEL, select specific channels or select ALL.
5. Below the grid, click either ALARM (red), GENERAL (Green), or NO RECORD (Blue) and then click a time block on the desired day.
6. Use the FROM/TO drop-down menus to copy the schedule of one day to another. For example, if you want your schedule for Monday to be the same on Wednesday: under FROM select MON, under TO select WED, and then click COPY.
7. Click APPLY. Click OK in the REMARK window. Click EXIT.

Recording Schedule



CCTV Resolution

CCTV resolution is measured in vertical and horizontal pixel dimensions and typically limited by the capabilities of both the camera and the recorder that you are using for your CCTV surveillance installation. CCTV systems use an analog video signal. For television specifications (which CCTV uses) the highest resolution that can be captured and stored is 704 x 480 (NTSC for the United States) and 720 x 576 (PAL for Europe). This resolution is known as D1 resolution. A high end CCTV recorder is capable of recording at up to D1 resolution.


CCTV Resolutions

D1: 704 x 480
HD1 (2CIF): 704 x 240
CIF: 352 x 240
QCIF: 176 x 120


Recording Schedule (TIMER RECORD) Example

You want your system to record continuously on all channels from 9 AM to 5 PM Monday to Friday. You also want Alarm/Motion recording from 5 PM to 9 AM. You do not want the system to record Saturday or Sunday:

1. Open the Schedule menu.
2. Under CHANNEL, select ALL.
3. Click the blue NO RECORD block below the grid. A checkmark will appear in the block.
4. Under SUN, click blocks 00~23. The blocks will turn blue.
5. Under FROM, select SUN. Under TO select SAT, and then click COPY.
6. Click the red ALARM block below the grid.
7. Under MON, click blocks 00~08 and blocks 17~23. The blocks will turn red.
8. Under FROM, select MON. Under TO select TUE, and then click COPY. Repeat for Wednesday, Thursday, and Friday. Your completed schedule should be the same as the schedule to the right.
9. Click APPLY. Click OK in the REMARK window. Click EXIT in all menus until all windows are closed.

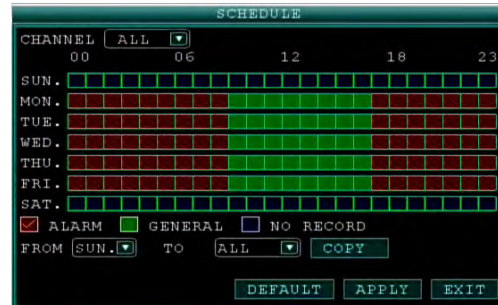

Recording Schedule

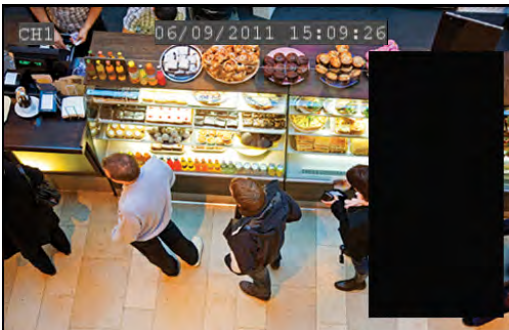

Privacy Mask Field

MASK FIELD lets you block a specific portion of a channel you do not want recorded or shown on the display screen. This can be useful if you need to conceal a sensitive area being captured by the camera. To use the Privacy Mask Field:

1. From the Record menu, click MASK FIELD. The Mask Field menu opens.
2. Choose a channel you wish to apply the Mask Field.
3. Select ON from the SWITCH drop-down menu.
4. Click SETUP. The Mask menu will be replaced by the full-screen camera view of the desired channel. Using the mouse, click and drag the cursor over the area you want to conceal. A single click will produce a small black square.
5. Right-click anywhere on the screen to return to the Mask Field menu.
6. Click APPLY. Click OK in the REMARK window. Click EXIT.

Motion Detect Setup


You can configure motion detection for each channel (Camera) connected to the DVR. To configure motion detection:

1. From the Main Menu click DEVICES. Then click MOTION.
2. Under STATUS, select ON to enable motion detection for the desired channel. Scroll down for additional channels. Note: If in the RECORD screen a Channel is set to OFF, MOTION is also disabled for that Channel.
3. Under SENSITIVITY, select 1 through 8. The higher the number, the more sensitive the motion detection.
4. Under MD AREA, click SETUP. The red motion grid appears over the selected channel in full screen.
5. Click the blocks in the grid to enable/disable motion detection. Red=motion detection enabled; Clear=motion detection disabled.
6. Right-click anywhere on the screen to return to the Motion Detection menu.
7. Click EMAIL, then select ON/OFF to turn on e-mail notification. E-mail must be configured. See manual for details.
8. Click APPLY. Click OK in the REMARK window. .

When MD is triggered, in the Live View Screen you will see a red **[M]** in the Channel with a MD warning. You may also see a **[R]** if you set up the channel to record when an alarm is triggered.



Motion Detect Menu

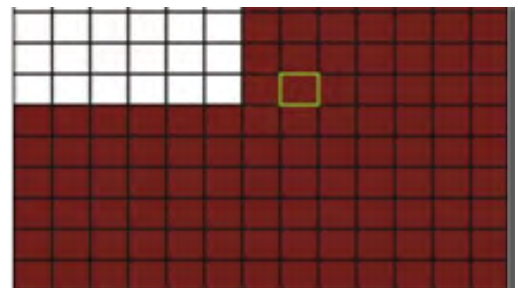

Motion Detect Grid

BASIC OPERATION

PLAYBACK


PLAYBACK

PLAYBACK Mode

Playback and Record Search

View recorded video on the system through the SEARCH Menu. To begin playback:

1. There are two ways to access the SEARCH menu. Right-click anywhere on the screen and select VIDEO SEARCH from the Quick Access Menu. The SEARCH Menu opens. Or from the Main Menu select SEARCH.
NOTE: When you first open the SEARCH Menu, it displays the current month and date.
2. Click PLAYBACK to select a specific channel. Note a maximum of 4 channels can be played back at one time.
3. Under DATE, enter a date using the Virtual Keyboard (mouse only).
4. Click SEARCH. Recorded events on the system appear in red (alarm events—includes both alarm and motion events) and green (normal recording).
5. Click a date in the Month Grid to search for video files.
6. Click a time block in the Hour Grid to view the video. Playback begins.
7. Move the mouse slightly to display the on-screen play back controls. You can also use the playback control with buttons on the remote control or front panel of the system.

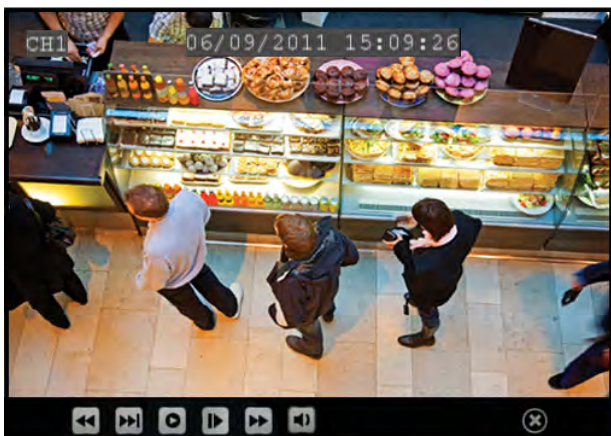

On-screen Playback Controls


On-screen Playback Controls

To use the on-screen playback controls:

1. Click the VCR-like controls to play, pause, fast forward, rewind, and slow down playback.
2. Click X to quit playback and return to the Search menu.



Video Search Menu

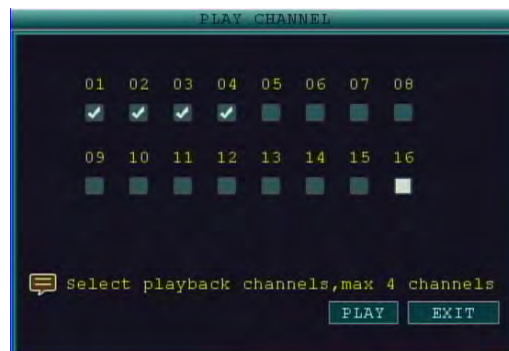

Play Channel Menu



Record State

Month Grid

Hour Grid

8. Under RECORD STATE, the system shows recorded events in a Month Grid and a Time Grid. The selected day of the month will be outlined in red. Green=normal recording; Red=alarm recording (includes both alarm and motion events). Click a date in the month grid to view recorded video files for that selected date in the hour grid.


File List

Use the FILE LIST sub-menu to see a detailed list of all the recorded video on your system. To open the FILE LIST:

1. From the RECORD SEARCH Menu, click SEARCH to search the system for recorded video.
2. Click FILE LIST at the bottom of the menu. The FILE LIST menu opens.

To use the File List:

1. Under TYPE, select NORMAL to view only normal recordings, ALARM, to view alarm recordings (includes alarm and motion detection), or ALL to view all video on your system.
2. Use the buttons on the side panel to navigate the file list:
 - FIRST: Jump to the first page of the list
 - PRE: Turn to the previous page
 - NEXT: Turn to the next page
 - LAST: Jump to the last page of the list
 - ALL: Select all files
 - OTHER: Toggles selections between checked and unchecked.
 - BACKUP: After selecting a file(s), click to begin copying the data to a USB flash drive (not included);
3. Click any file to begin playback.

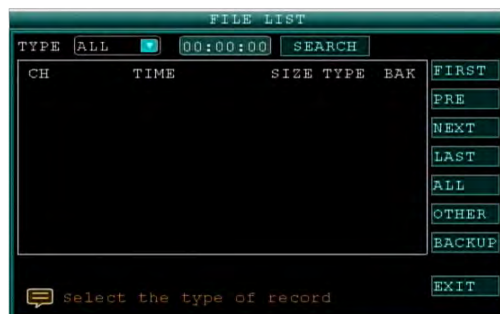

File List Menu

BASIC OPERATION

PLAYBACK

Backup

Use the FILE LIST sub-menu to find recorded video on your system and copy it to a USB flash drive (not included).

NOTE: The system is compatible with most major brands of USB flash drives, with capacities from 256 MB to 4 GB.


To backup recorded data:

1. Connect a blank USB flash drive to the top USB port on the front panel of the system.
2. Open the FILE LIST menu and search for recorded data on the system as shown above.
3. Select the file you want to backup and click the "BACKUP" box next to the file name. Select multiple files if desired. Click ALL to select all files; click OTHER to deselect all files. NOTE: The size of each file is shown in the File List menu. Use this to help you find a USB flash drive large enough to hold all the files you wish to backup.
4. Click BACKUP from the side-panel to immediately begin copying the files to the USB flash drive. NOTE: Backup progress appears in the status window. DO NOT remove the USB flash drive during backup.
5. When the space in backup device is less than recording file, the system will prompt "Space not enough"...
6. You can remove USB device directly when backup is finished




USB Backup

Warning!. Do not remove the USB drive during backup.

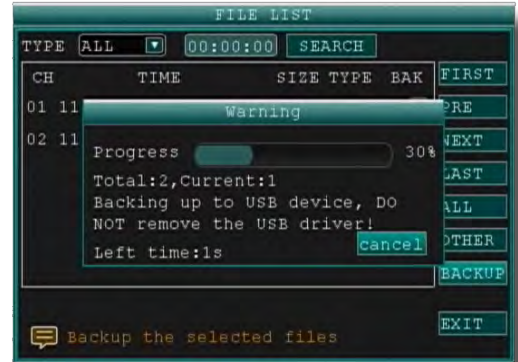

Backup Menu & Warning Notice

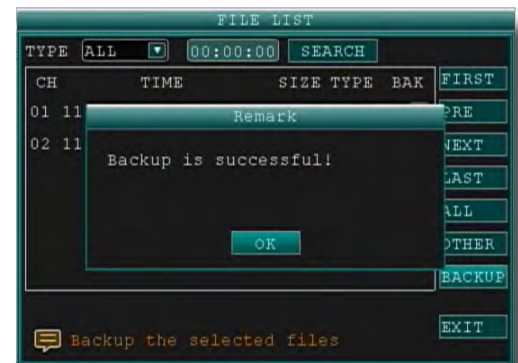

Backup Successful Notice

HDD MANAGEMENT

Hard Drive and USB Options:

The HDD screen displays essential information about the system's internal hard drive, and lets you format the internal HDD and external USB flash drive (not included). If there is no hard drive in DVR, or the DVR cannot read the hard drive, or the hard drive is not formatted, it will display a red "H" in the video preview interface. To access this menu, from the MAIN MENU click DEVICES then HDD.


The HDD menu displays the following:

1. HDD STATUS: The system will display "OK" for normal operation
2. HDD SIZE: The size (in gigabytes) of the internal hard disk drive. The size of your system's internal hard drive will vary by model
3. FREE SPACE: The space (in gigabytes) remaining on the system's internal HDD
4. AVAILABLE TIME: The recording time (in hours) remaining on the HDD based on your current record settings
5. OVERWRITE: Select ENABLE or DISABLE. If Overwrite is enabled, the system will record over the oldest video data once the HDD is full. If Overwrite is disabled, the system will stop recording once the HDD is full and the "FULL" LED on the front panel of the system will light up.
6. USB STATUS: The system will display "OK" for normal operation
7. USB SIZE: The size (in gigabytes) of the USB drive attached.
8. FREE SPACE: The space (in gigabytes) remaining on the USB drive.




Formatting the Internal Hard Drive

If you installed a new hard drive, you must format the hard drive in the DVR before it can be used. Clicking on the HDD FORMAT button will begin the formatting process. After formatting, the system will restart. ATTENTION: Formatting the internal HDD erases all video data. This step cannot be Undone.

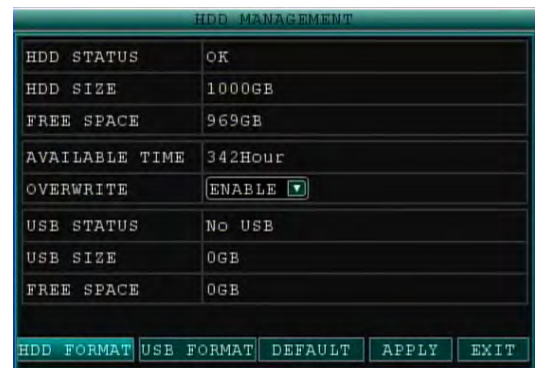

HDD Management

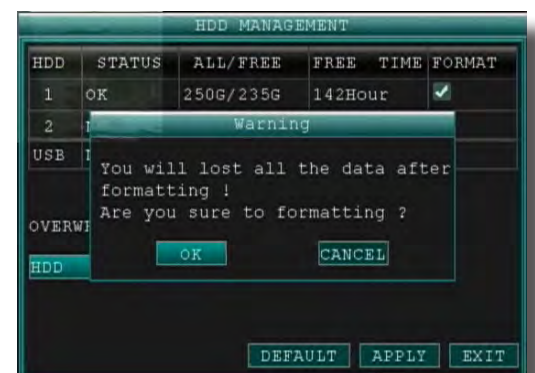

Hard Drive Format Warning

ADVANCED OPERATION

ALARM

Hard Drive and USB Options continued:

Formatting the USB Flash Drive

Use a USB flash drive to backup recorded video and upgrade the system's firmware. You should always format the USB flash drive you intend to use with the system.

NOTE: Not formatting the USB flash drive may result in improper functionality.



USB Flash Drives

The system is compatible with most major brands of USB flash drives, with capacities from 256 MB to 4 GB. If you need to reformat your flash drive then click on the U DISK FORMAT button while the USB drive is connected to the USB port on the front of the DVR. Be aware that this button is not for use with any external USB hard drive you may connect to the DVR for backup. External hard drives will need to be formatted using the FAT32 format and this can be done by connecting the drive to the USB port on a PC and reformatting it from there.

ADVANCED SETUP

Use the DEVICE MANAGEMENT menu to configure alarm settings, motion detection, mobile surveillance, PTZ settings and the hard drive. The Device Management menu contains the following sub-menus: HDD, Alarm, Mobile, Motion Detect, and PTZ.


ALARM

Alarm and E-mail Options:

Use the ALARM SETUP menu to configure alarm and e-mail settings. NOTE: External alarm devices must be connected to the alarm block on the rear panel of the DVR in order to use the I/O (input/output) alarms of the system. Up to four external alarm devices can be connected to this DVR. Devices 1 and 2 work with channels 1-8. Devices 3 and 4 work with channels 9-16. See next section "Alarm Inputs" and "Alarm Inputs Diagram" for details on attaching alarm inputs. To access this menu, from the MAIN MENU click ALARM.

To configure alarm settings:

- Under I/O STATUS, select NO (Normal Open), NC (Normal Closed), or OFF for Alarm input. Next under I/O RELATION select SETUP and choose what channel or channels you want to link to this alarm device in the I/O RELATED CHANNEL screen. Click APPLY to save your settings. Repeat if desired for the remaining I/O devices. Note: If in the RECORD screen a Channel is set to OFF, ALARM is also disabled for that Channel.
- To activate Loss Alarms use the drop down menu and select ON/OFF:
 - HDD LOSS: The alarm will sound if the internal HDD is damaged
 - HDD SPACE: The alarm will sound when the HDD is full (overwrite must be disabled)
 - VIDEO LOSS: The alarm will sound when a camera is disconnected
- Under ALARM MANAGE, configure the following:
 - OUTPUT: Set the output time (in seconds) on the spot monitor from 0s, 10s, 20s, 40s, or 60s, 5MIN, 10MIN.
 - BUZZER: Set the time (in seconds) for the DVR buzzer to sound when an alarm is triggered—0s, 10s, 20s, 40s, or 60s, 5MIN, 10MIN. NOTE: Set the buzzer to 0s if you want to disable the alarm during motion detection.
 - POST REC: Set the time (in seconds) for the system to record after a triggered alarm—30s, 1MIN, 2MIN, 5MIN

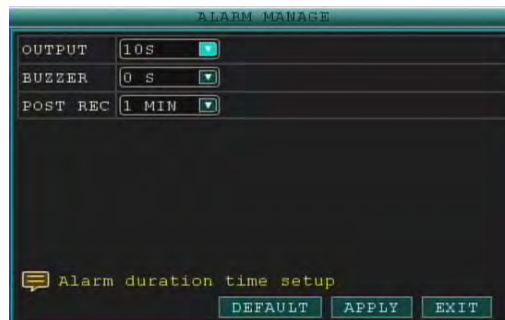


Alarm Manage Screen



Device Management



Alarm Setup Menu

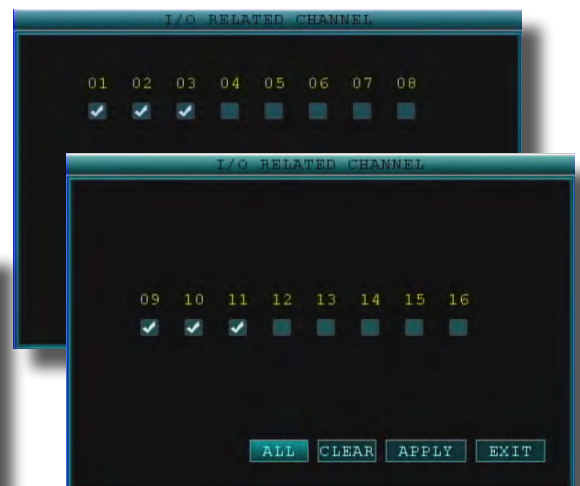

Alarm Setup I/O Related Channel Screens

- Click APPLY. Click OK in the confirmation window.

Alarm Inputs:

Alarm inputs are devices or switches that activate when a door, window, cabinet etc. is opened or accessed. For example, you might want to only have the camera record when someone opens a tool cabinet or when a door opens vs. recording when motion occurs around those areas. There may be people moving by those areas frequently but you are only concerned about when those areas are accessed. This saves hard drive space and makes it easier to find an event that was recorded to the hard drive.

To configure alarm inputs for devices without their own voltage you will use the +12V input supplied on the alarm block. See Alarm Inputs Configuration diagram at the right.

Note: If Alarm Input Device has its own power supply make sure:


- Voltage rating is between 6V and 12V. Do not use the +12V connection on the Alarm Block.
- Ground must be connected to GND in Alarm Block for device to operate properly

When an alarm is triggered, in the Live View Screen you will see a red **[I]** in the Channel with an alarm input warning. You may also see a **[R]** if you set up the channel to record when an alarm is triggered.

Alarm Output:

Alarm output is used to activate an external device such as a horn or light after an alarm is triggered. To do this the DVR uses a dry contact normally open relay. This DVR has two sets of alarm outputs: COM1/NO1 and COM2/NO2. To configure alarm outputs, connect the external device to the NO (Normally Open) and COM (Common) connections on the alarm block as required by the device. See table for Alarm Block Voltage. The maximum contact rating is 3A 24VDC. Note: ALARM MANAGE settings work the same on both outputs. Alarm inputs 1 and 2 activate alarm output COM1/NO1. Alarm inputs 3 and 4 activate alarm output COM2/NO2.

Alarm Inputs Configuration
(for devices without voltage)

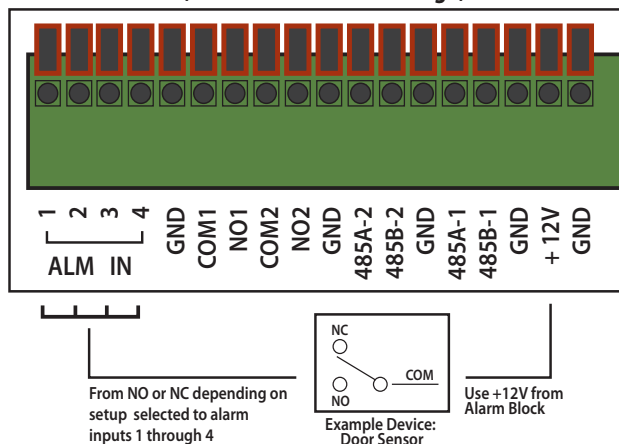

ALARM BLOCK VOLTAGE

MAX SWITCHING VOLTAGE	up to 24VDC
MAX SWITCHING CURRENT	up to 3A

E-mail Setup:

The system can send an e-mail notification with a JPEG snapshot for triggered events on the system. Please consult your e-mail provider for information to enter in this screen. To setup e-mail notification:

- Under EMAIL, select ON.
- Under SSL, select OFF. NOTE: SSL deals with encryption. Only advanced users should enable this option.
- Under SMTP PORT, enter the SMTP port of your e-mail server.
- Under SMTP, enter the SMTP address of your e-mail server. For example, smtp.gmail.com
- Under SEND EMAIL, enter the sender e-mail address.
- Under SEND PW, enter the password of your e-mail server.
- Under RECV EMAIL, enter the e-mail address that will receive the e-mail notification.
- INTERVAL: Set from 3 -240 minutes
- SET EMAIL CC: Add up to six Carbon Copy e-mail addresses.
- Click APPLY. Click OK in the REMARK window.



E-mail Tip

Depending upon your settings, the system can generate a lot of e-mail alerts. For that reason, we recommend setting up a dedicated e-mail address specifically for the Security System alert notices. Also to better manage your alerts, you will want the alert e-mails to go to a different account than the one sending them.

E-mail Setup Screen

E-mail Carbon Copy Setup


SYSTEM INFO AND SYSTEM UPDATE

System Information:

View system information, including the serial number, software version, MCU and MAC address, and serial number of the system. To access this menu, from the MAIN MENU click SYSTEM then click INFO.

System Maintain

Use the SYSTEM MAINTAIN menu to update system firmware and set an automatic system reset schedule. To access this menu, from the MAIN MENU click SYSTEM then click MAINTAIN.

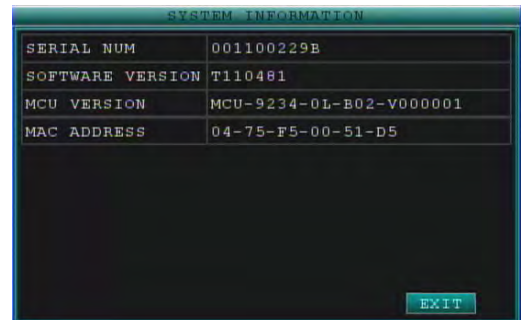

System Info




System Maintain

To enable AUTO MAINTAIN:

1. Under AUTO MAINTAIN, select ON. The Settings option appears.
2. Under AUTO REBOOT, EVERY DAY, then set the time of day using the Virtual Keyboard EVERY WEEK, then set the day from the drop down menu and time of day EVERY MONTH, then set the month from the drop down menu and the time of day.
3. Click APPLY. Click OK in the REMARK window.

To restore factory settings:

1. Click DEFAULT SETTINGS. This brings you to the DEFAULT SELECTION screen.
 - Options available to reset are: Display Setup, Record Setup, Record Schedule, Network Setup, DDNS Setup, HDD Management, Alarm Setup, E-Mail Setup, PTZ Setup, Mobile Setup, Motion Detection, Color Setup, Time Setup, Password Setup, Alarm Manage, System Maintain
 - ALL: Selects all settings.
 - CLEAN: Clears all settings.
 - LOAD DEFAULT: Restores all settings to factory defaults
2. Click OK in the prompt. This will restore all or selected items to the original factory settings. NOTE: Recorded video on the HDD will not be erased.

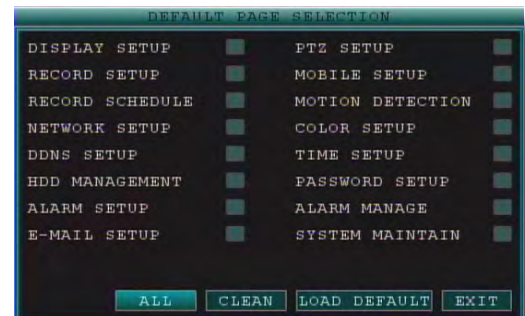

Default Page Selection

To restart the DVR (soft-reset):

1. Click RESTART.
2. Click OK in the prompt. The system will perform a soft-reset and load to a live split-screen view.

To upgrade firmware:

1. Copy the firmware file to an empty USB flash drive. The firmware file should not be in a folder.
2. Connect the USB flash drive to the top USB port on the front panel of your system.
3. Open the SYSTEM MAINTAIN (MAIN MENU>ADVANCED>MAINTAIN).
4. Click SYSTEM UPDATE. The system will scan the USB flash drive and begin updating the firmware. Do not remove the USB flash drive while the upgrade is taking place.
5. PARAMETER EXPORT: Copies the system settings of the device to an empty USB flash drive.
6. PARAMETER IMPORT: Imports system settings from another device.



System Update Warning Message



Restore Factory Defaults

Warning! Restoring factory defaults will cause any settings you've made to the system to be deleted. This includes recording and network setups along with passwords. This step cannot be undone. NOTE: Recorded video on the HDD will not be erased.

PAN TILT ZOOM...PTZ

Pan/Tilt/Zoom (PTZ) Setup:

NOTE: Consult the instruction manual of your PTZ camera for complete information about your camera, including protocol, baud rate and parity settings before beginning setup. Enter these settings in the DVR.

Step 1: Connect your PTZ Camera to this DVR



Connect a PTZ camera to the BNC and DC power cables. Also, connect the communication cable from the PTZ camera to the 485A (TX, +) and 485B (RX, -) control inputs to the Alarm/PTZ block on the back of the DVR. Note there are two sets of PTZ control connections (485A-1/485B-1 & 485A-2/485B-2). Multiple PTZ cameras can be set up with each by making parallel connections. See diagram for details and see "PTZ Camera Setup" Info box for additional information.



PTZ Camera Setup

NOTE: It is recommended for best results to use 120 Ω shielded twisted pair cable of a sufficient gauge to meet your application length. 18 to 22 gauge is usually sufficient.

In addition, be sure to only install the 120 Ω terminating resistor that comes with your PTZ camera in the last parallel connected camera. Keeping that resistor in all cameras can possibly degrade the signal and can cause unexpected or loss of operation and control.

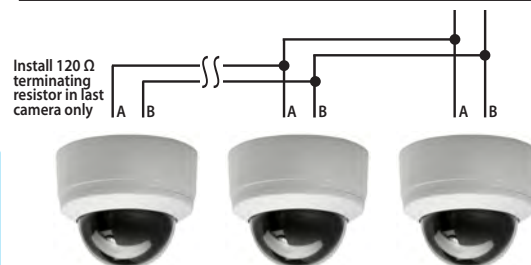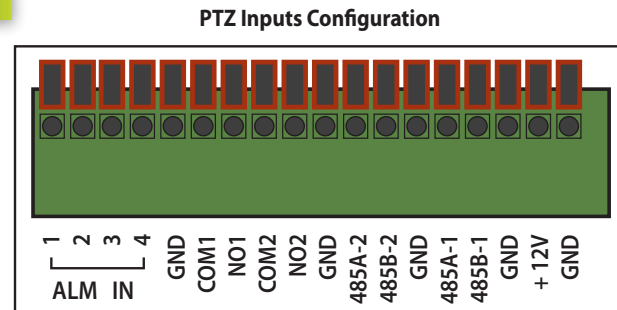

Note: Use similar setup for PTZ inputs 485A-2 & 485B-2


Step 2: Configure PTZ Communication Settings:

To access this menu, from the MAIN MENU click DEVICES then PTZ (see PTZ Setup image). Use the slider bar on the right of the screen to access all 8 channels available on this DVR. The PTZ setting options for each camera can be selected independently and are available next to each camera's channel number.

1. Under PROTOCOL, select PELCO-D or PELCO-P for the selected channel.
2. Under BAUD RATE, select 1200, 2400, 4800, or 9600.
3. Under PARITY, select ODD, EVEN, MARK, SPACE, or NONE parity bits. Note: Mark = 1, Space = 0 parity bits.
4. Under ADDRESS, provide an address from 001~255 using the Virtual Keyboard for each PTZ camera.
5. Click APPLY. Click OK in the REMARK window.
6. Click EXIT in all menus until all windows are closed.



PTZ Setup

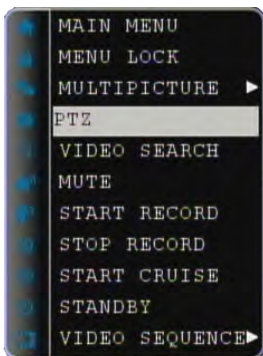

Select PTZ from the Quick Access Menu

Step 3: Configure the Operation & Control of your PTZ Camera(s):

After your PTZ camera(s) are set up you can control their operation from your DVR. Note: Individual features must be available on your camera to operate.

1. In Live View, double click on the Channel with the connected PTZ Camera to open to full screen view. This selects the channel to configure and control.
2. From the Quick Access Menu select PTZ. (See image at left)
3. From the PTZ CONTROL screen you can adjust:
 - Pan Speed (3-63): Adjusts the speed the camera will move.
 - Zoom: "+" Zooms in and "-" zooms out
 - Focus: "+" and "-" focuses the picture.
 - Iris: "+" lets more light in and "-" removes light from the picture. This is useful to correct backlight issues.
 - Directional keys: Left and Right Arrows control the pan; Up and Down arrows control the tilt.



PTZ Control - Sub Menu

ADVANCED OPERATION

PTZ SETUP


Pan/Tilt/Zoom (PTZ) Setup Continued:

In the PTZ SETUP screen you can set or control the following for each PRESET defined:

1. SET PRESET: Saves any PRESET functions changed with this screen.
2. CLEAN PRESET: Clears a defined PRESET without going to the SET CRUISE screen.
3. CALL PRESET: Calls a defined PRESET without going to the SET CRUISE screen.
4. AUTO SCAN: Enables AUTO SCAN feature without going through Quick Access Menu.
5. STOP SCAN: Enables AUTO SCAN feature without going through Quick Access Menu.
6. CRUISE SETUP: Configures the Cruise Setting. See next step for details.



PTZ Control

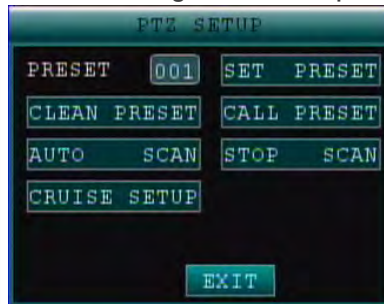

PTZ Setup

Step 4: Configure the CRUISE SETUP of your PTZ Camera.

This feature allows you to set up a series of Pan, Tilt and Hold camera sequences and then execute those operations in a continuous loop. This is useful when you want to record or view the same set of pre-determined areas. You can customize these settings for each PTZ camera connected to your DVR.

Understanding the CRUISE SETTING Options:

To access this menu In Live View, double click on the Channel with the connected PTZ Camera to open to full screen view. From the Quick Access Menu select PTZ. Click SETUP from the PTZ CONTROL screen and you will see the PTZ SETUP Menu. Click CRUISE SETUP to configure the cruise settings for your PTZ Camera.

1. TOTAL: The total number of PRESET's defined
2. PRESET: A defined pan, tilt and hold sequence. You can enter up to 128 PRESET's for a channel depending on how many areas you want to view or record.
3. STOP TIME: The total time in seconds for the camera to move through its defined operation. Note: This includes travel time from the previous set point completion plus the length of time you want the camera to hold on a position. For example, if the STOP TIME is set to 10 seconds and the travel time from the previous set point is 6 seconds, then the camera will hold on the position for only 4 seconds. It can take some trial and error to get the timing you want. To help fine tune your timing after a set point is defined, selecting CALL will travel through the cruise setting for the PRESET allowing you to adjust your timing.
4. SET: Stores the PRESET in memory
5. CLEAR: Removes the defined pan, tilt and hold sequence for a CRUISE SETUP. PRESETS will still be unchanged.
6. SAVE: Saves all PRESETS defined.



PTZ Cruise Setup

How to define a Cruise Setting PRESET

1. With your PTZ Channel selected and the CRUISE SETUP menu open as explained in the previous sections, be sure TOTAL is 0 and you are on PRESET 001. If not click CLEAR to reset the PRESET's.
2. Using the Arrow Keys adjust the camera to the first position you want to monitor.
3. Set the STOP TIME setting using the Virtual Keypad. (See STOP TIME explanation above for important information)
4. Click SET to save. The TOTAL and PRESET numbers move to the next number.
5. Repeat steps 2 through 4 for each PRESET you want to define.
6. Click SAVE to save all PRESETS for this CRUISE SETTING.
7. Follow the same steps above to configure other PTZ cameras on other Channels.
8. Click EXIT several times to get to the Live View screen
9. Use the Quick Access Menu to select START CRUISE and STOP CRUISE to begin or end Cruise operation for all defined PTZ channels.

NETWORK SETUP FOR REMOTE ACCESS

Use the NETWORK SETUP menu to configure your network and DNS settings for remote access. If you are only going to access the DVR locally from a computer attached to the same router as the DVR, you only need to configure settings using either the DHCP or STATIC IP. Because you are on the same network, port forwarding and knowing the public IP address are not necessary. You will just access the DVR by entering the IP address of the DVR from the NETWORK setup into the Internet Explorer browser window. If you are going to take advantage of the Remote Surveillance feature, such as for a smart phone or to view your system outside of your network over the internet you will need to review and set up Port Forwarding and the DDNS. After you setup the NETWORK settings using DHCP, STATIC IP or DDNS, see the REMOTE SURVEILLANCE section for further instructions.

There are five options for configuring the DVR to be accessed remotely: DHCP, Static IP, UPnP, PPPOE, and DDNS. To access this menu, from the MAIN MENU click ADVANCED then NETWORK SETUP. Be sure your router or network is connected to the LAN port on the back of the DVR.

The screenshot shows the 'NETWORK SETUP' menu with the following fields: TYPE (DHCP), MEDIA PORT (09000), WEB PORT (00080), DNS (192.168.002.001), IP ADDR (Getting IP), AUTO DNS (AUTO), and UPNP (OFF). At the bottom are buttons for DDNS SETTINGS, DEFAULT, APPLY, and EXIT.

Network Setup

DHCP (Dynamic Host Configuration Protocol)

DHCP is a protocol used by networked devices (clients) to obtain various parameters necessary for the clients to operate in an Internet Protocol (IP) network. It allows you to quickly connect to your network and obtain an IP address from the router. After the initial setup, we recommend that you disable DHCP, then select STATIC from the TYPE drop down box and set the IP address between 1~100. For example, if your IP address is 192.168.0.107, change the last digits to 90 (i.e. 192.163.0.90). This ensures that port forwarding will not change in the event of power failure or resetting of your network.

To configure DHCP settings:

1. Select DHCP from the TYPE drop down box in the NETWORK SETUP Menu. You should see the message "Getting IP..." The router will assign an IP address. This is the IP address you will forward port 80 to on the router so you can access the DVR from remote computers See comment above to configure a static IP.
2. Click APPLY. Click OK in the confirmation window.
3. If necessary, change the Media and Web Port settings

Static IP

You will need to setup the network settings on the DVR to match the settings of the router to which your DVR is connected. This information can be obtained through your computer. Windows 7, Vista or XP all have similar ways to access this data.

To get the router settings:

1. To access the router's settings you will need to enter the Command (CMD) panel on your computer. It must be connected to the same router as your DVR.
 - In Windows 7 or Vista, from the "START" menu type "CMD" in the field that says, "Search programs and files" and hit ENTER or click on the magnifying glass icon.
 - In Windows XP select "Run" from the "START" menu. Type "CMD" after the prompt
2. Type "ipconfig" at the prompt and hit enter
3. You will get a screen that contains information similar to what is shown below. Within all of the information shown, locate the IPv4, Subnet Mask and Gateway addresses. These you will enter into the STATIC IP screen in the NETWORK SETTINGS menu in your DVR. See next step.

```
C:\Users\your id>ipconfig

Windows IP Configuration

Ethernet adaptor Local Area Connection:
    Connection-specific DNS Suffix. . . . . : yourdomain.com
    Link-local IPv6 Address . . . . . : fe80::e743:c4ae:fd28:cb3e%15
    IPv4 Address. . . . . : 192.168.1.10
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway. . . . . : 192.168.1.1
```

Windows "ipconfig" Info Example

REMOTE ACCESS

NETWORK SETUP

To configure Static IP settings in the DVR:

1. Select STATIC IP from the TYPE drop down box in the NETWORK SETUP Menu.
2. Enter your IP Address, Subnet mask, and Gateway info you obtained from your computer through the previous step in the respective fields using the Virtual Keyboard.
3. Click APPLY. Click OK in the confirmation window.
4. If necessary, change the Media and Web Port settings

UPnP (Universal Plug and Play)

UPnP Forum is an industry initiative designed to enable simple and robust connectivity among consumer electronics, intelligent appliances and mobile devices from many different vendors. This protocol is designed to allow networked devices, such as computers, printers, mobile devices to automatically discover each other's presence on a network and to connect seamlessly for data sharing and communications. NOTE: Your Router must support UPnP function to use this protocol.

To configure UPnP settings:

1. Enable the UPnP function in your Router.
2. In this DVR, Open the MAIN MENU and click ADVANCE.
3. From the Advanced Setup menu, click NETWORK.
4. Under UPnP, select ON.
5. Click APPLY to save your settings and then click OK in the confirmation window.
6. Using a remote PC, open Internet Explorer.
7. In the address bar, enter your Router WAN IP address immediately followed by WEB PORT (no spaces). Example: http://XXX.XXX.XXX.XXX(Router WAN IP):XXX(WEB PORT)
8. Enter your system ADMIN password and select INTERNET. NOTE: If you have not enabled passwords on the system, leave the password field blank.
9. Click LOGIN.

The screenshot shows the 'NETWORK SETUP' window. The 'TYPE' is set to 'STATIC'. The 'MEDIA PORT' is '09000' and the 'WEB PORT' is '00080'. The 'DNS' is '192.168.002.001'. The 'IP ADDRESS' is '192.168.002.234'. The 'SUBNET MASK' is '255.255.255.000'. The 'GATEWAY' is '192.168.002.001'. The 'UPNP' is set to 'OFF'. At the bottom, there are buttons for 'DDNS SETTINGS', 'DEFAULT', 'APPLY', and 'EXIT'.

Static IP Menu

PPPoE (Point-to-Point Protocol over Ethernet)

The Point-to-Point Protocol over Ethernet (PPPoE) is a network protocol for encapsulating Point-to-Point Protocol (PPP) frames inside Ethernet frames. It is used mainly with DSL services where individual users connect to the DSL modem over Ethernet and in plain Metro Ethernet networks. Use this option if you are going to attach the DVR directly to a DSL or Cable modem instead of a router.

To configure PPPoE settings:

1. Select PPPOE from the TYPE drop down box in the NETWORK SETUP Menu.
2. You will need to contact your ISP provider for the user name and password need to enter into the PPPOE NAME and PASSWORD fields.
3. Click APPLY. Click OK in the confirmation window.
4. If necessary, change the Media and Web Port settings.

The screenshot shows the 'NETWORK SETUP' window. The 'TYPE' is set to 'PPPOE'. The 'MEDIA PORT' is '09000' and the 'WEB PORT' is '00080'. The 'DNS' is '192.168.002.001'. The 'PPPOE NAME' and 'PASSWORD' fields are empty. The 'IP ADDR' is 'Connecting'. The 'UPNP' is set to 'OFF'. At the bottom, there are buttons for 'DDNS SETTINGS', 'DEFAULT', 'APPLY', and 'EXIT'.

PPPoE Setup

DDNS (Dynamic Domain Name Service)

A DDNS account allows you to set up a web site address that points back to your Local Network so you can access the DVR over the Internet using a static or dynamic IP address. One problem with a dynamic address is your internet service provider (ISP) changes this address from time to time. When it changes you need to re-configure your DVR with the new address. To do so you will have to get the new IP address. Although you can go to www.myipaddress.com to get the new IP address, you still have to make the changes manually.

So what are your choices? The first would be to obtain a static IP address from your ISP. This can get expensive due to setup fees and monthly rates. Fortunately there is an easier option. That is to use a dynamic domain name service (DDNS) to get a domain name that can be linked to your dynamic IP address. While there are multiple DDNS services available, we recommend www.dyndns.com as the DVR has been already configured to accept account information from this service.

How DynDNS.com works:

1. You install the DynDNS® Updater software on your network
2. When your Internet Service Provider changes the your IP address, the DynDNS Updater detects that the network's IP address has changed
3. The DynDNS Updater sends the new IP address to DynDNS.com
4. The DynDNS.com update server receives the information, and assigns the new IP address to your Dynamic DNS hostname you created.

In addition to automatically keeping up with the changes in the address, you will now be able to enter a domain name rather than a string of digits when accessing the DVR in Internet Explorer.

DynDNS.com Setup Screen

How to obtain your Domain Name from www.dyndns.com

1. Using a computer that is connected to the same router as the DVR, use Internet Explorer to go to www.dyndns.com
2. Decide whether you only need one domain name which is free or require multiple names for a fee.
3. Follow the instructions for completing the required information to register
4. You will receive a confirmation e-mail with your new domain name. An example domain name might be adam@dyndns.com. You will need it to configure the DVR.

First obtain your Router DNS

You need to get your DNS manually from your router. You will need the Primary or Secondary DNS from your router for DDNS to function properly.

To obtain your Primary or Secondary DNS:

1. In your web browser, log in to your router using its Default Gateway address. NOTE: Refer to your router's manual or software for login information. You can also get the Default Gateway on your PC by selecting Start>Run. Type CMD and press Enter. In the Command Prompt window type ipconfig and press Enter.
2. View its WAN settings. Write down the Primary or Secondary DNS address for use in the next step.

WAN Settings Example


REMOTE ACCESS

NETWORK SETUP

Next configure DDNS settings in the DVR

From the Network Setup menu, enter Primary or Secondary DNS from the WAN settings of your router in the DNS field

1. Click DDNS SETTINGS.
2. Under DDNS, select ON.
3. Under SERVICE, select DYNDNS if you obtained your domain name from DynDNS.com.
4. Under DOMAIN NAME, enter your DDNS domain name you received from the confirmation email. For example, if your domain name is adam@dyndns.com, you need to enter adam@dyndns.com, in the text field using the Virtual Keyboard.
5. Enter your DDNS user name and password in the respective fields.
6. Click APPLY. Click OK in the confirmation window.
7. Click EXIT. The system will prompt you that it must restart. Click OK.



DDNS Setup


Port Forwarding

Port Forwarding allows computers and devices outside of your network to communicate with the DVR. You will need to forward ports 80, 100 and 9000 from the attached router to the IP address of the DVR. Gather the make, model and IP address of the router. If you changed the default router login, then you will need to know the user name and password for that router. Follow these steps:

Step 1: How to Determine the IP Address of the DVR

NOTE! The DVR and PC must be connected to the same router and both must be powered up before proceeding.

1. Select DHCP from the TYPE drop down box in the NETWORK SETUP Menu. You should see the message "Getting IP..." The router will assign an IP address.
2. Restart the DVR.
3. Once the DVR has restarted, reopen the Network Setup window and the IP address of the DVR will now be listed. This is the address to which you will forward ports 80 and 9000. If you plan to access your DVR via a smartphone, you will need to forward port 100 as well. Be sure to configure the Mobile Network screen of this DVR with port 100. See Mobile Phone Setup in this manual for details.

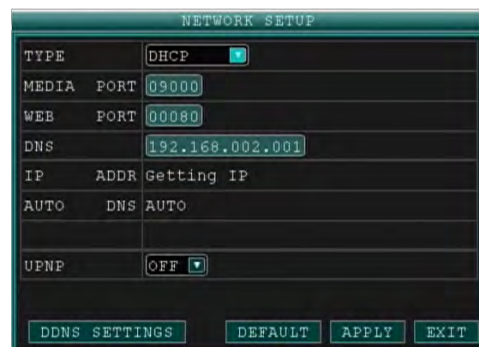


Network Setup-Getting IP Address

Step 2: Configure your Router for Port Forwarding

NOTE: Although all routers are different, the following is the basic information that needs to be configured. Consult your Router Manual for details on Port Forwarding configuration for your specific router. Some Internet Service Providers (ISP) may block access to these settings in the router they provide. You may need to contact your ISP to make these changes for you.

1. Access your routers's Port Forwarding screen (See image at right). Your's may be slightly different but the information required is the same.
2. Enter your port forwarding information for each port you want to forward. As noted above you will need to forward ports 80, 100 and 9000.
 - Assign a name
 - Start Port: 80; End Port: 80
 - Enter your DVR IP address you obtained from "Step 1: How to Determine the IP Address of the DVR"
 - Click Apply and repeat for the remaining ports.

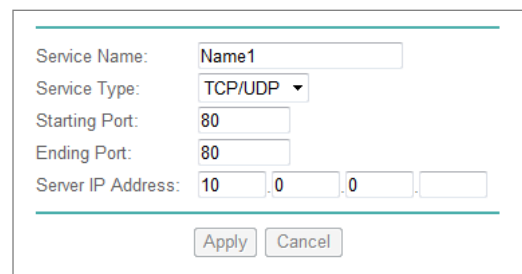

Port Forwarding Screen from Router




Port Forwarding Naming Tip

For clarity and easier identification of ports in your router we suggest naming the ports as follows: Port 80 is for your Web Browser - name this port "DVR-Web". Port 9000 is for streaming media - name this port "DVR-Media". Port 100 is for your mobile phone - name this port "DVR-Mobile".

REMOTE SURVEILLANCE


Remote Surveillance using Internet Explorer 8 or 9:

The DVR features built-in browser-based software that allows you to access your system remotely over your local area network (LAN) or over the Internet using Internet Explorer®. Once you have configured the network settings on the DVR to match those on your router and forwarded the ports needed by the DVR to enable remote access over the Internet, you will be ready to remotely view your cameras using a webcam program based on an ActiveX control. For this to work, you will have to enable the ActiveX control options that are built into Internet Explorer. You will also need to check your “User Account Control” setting.

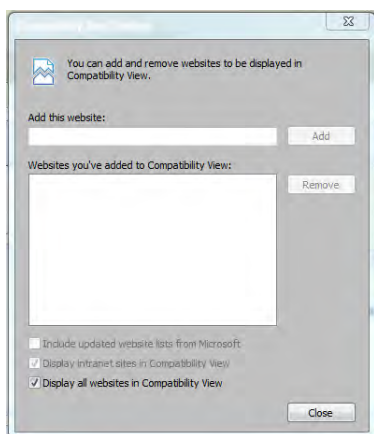

IE9 Compatibility
View Setting Screen

Note: To use Internet Explorer 9 you must enable “Display all websites in Compatibility View” before you connect to the DVR.

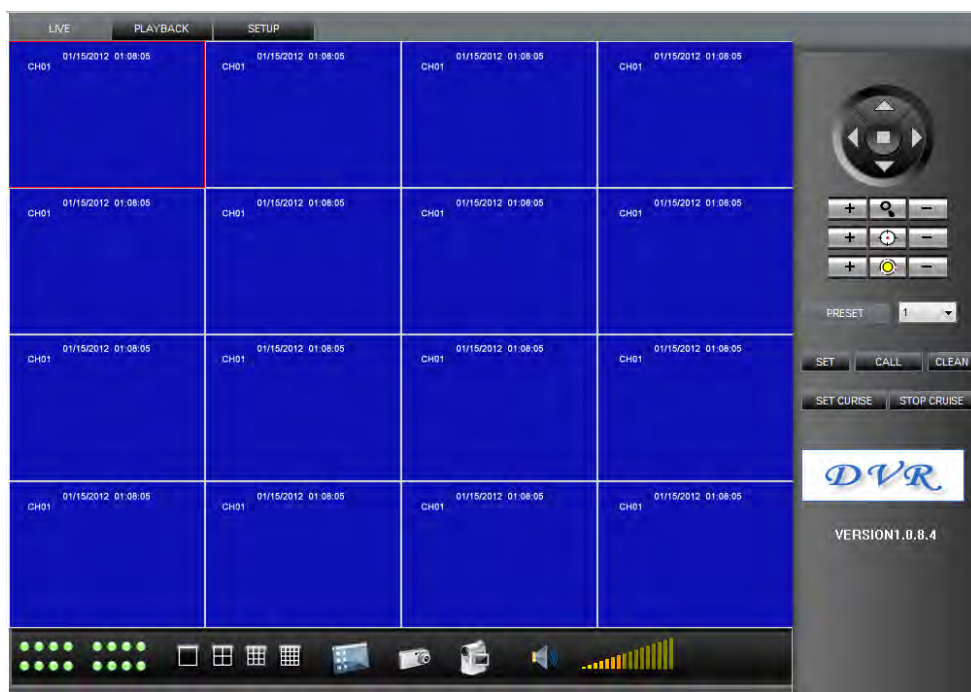

Configuring Windows “User Account Control”:

Check the “User Account Control” setting in Windows Vista or Windows 7 to be sure the setting is configured as shown below. If not you might receive an error message informing of a codec that is missing or not installed.

Windows Vista

1. Open the Control Panel
2. Select “User Accounts and Family Safety”
3. Select “Add or Remove User Account”
4. Select user account to change
5. Select “Turn User Account Control on or off”. Note: Depending on your version of Vista, this screen might be accessible on the bottom of the “Select User Account to Change” screen under “Additional things you can do” > “Go to main user account page”.
6. Uncheck the box next to “Use User Account Control (UAC) to help protect your computer.”
7. You will need to re-start your computer for the change to take effect.

Windows 7


1. Open the Control Panel
2. Select “User Accounts”
3. Select “Change User Account Control Settings”
4. In the “Choose to be notified about changes to your computer” screen, move the slider to the lowest setting “Never notify”.

REMOTE ACCESS


REMOTE SURVEILLANCE

Configuring ActiveX Control in Internet Explorer 8:


1. Open Internet Explorer 8
2. Click on Tools
3. Select Internet Options in the pull-down menu
4. Click on the Security Tab
5. Select Trusted Sites
6. Click on the Sites button
7. Uncheck the "Require server verification (https:) for all sites in this zone" button.
8. Type the DVR's IP address (obtained during Network Setup) or DDNS domain name (obtained through DynDNS.com setup) into the "Add this website to the zone:" box.
9. Click the Add button
10. Close the window.
11. Back in the "Security Tab" screen, click the "Custom level..." button.
12. Pull down the "Reset to:" menu button and select "Low"
13. Click the "Reset..." button
14. Click "Yes" when asked, "Are you sure you want to change the setting for this zone?"
15. Click OK
16. Click Apply
17. Click OK
18. Close Internet Explorer. You are now ready to access the DVR using Internet Explorer 8.

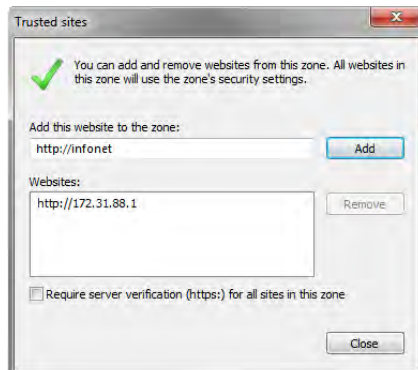

Trusted Sites

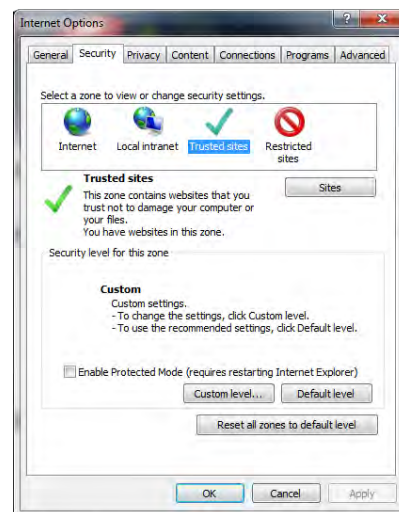

Internet Options-Security Screen

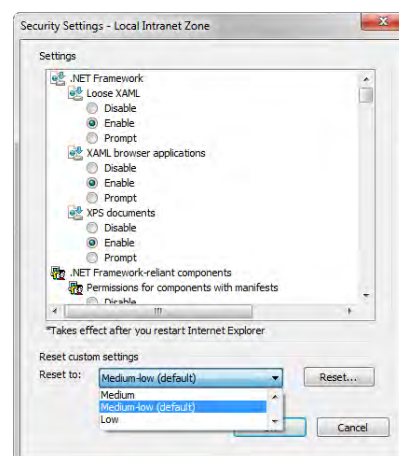

Security Settings

Using Remote Surveillance:

With your system connected, you can now log in to your DVR using Internet Explorer.

The software from the DVR will install the first time you access the DVR through Internet Explorer and will allow you to operate the network remotely. The DVR supports access over LAN and WAN, also supports IP and domain name access.

Logging Into Your System Remotely

With your IP address, you can now log in to your DVR system either locally or remotely.

1. Open Internet Explorer. To view locally: In the address bar enter the IP address that your router automatically gave your DVR (see Port Forwarding section) or your static IP address given to you by your Internet Service Provider or IT administrator. To view remotely: In the address bar enter your IP address for your computer (not the DVR IP address). This is either your IP address received via "ipconfig" as described in Network Setup - "To get the router settings" or your IP address as described in DDNS setup or by going to www.whatismyIP.com. Note: For business applications, firewalls may restrict or mask the true IP address of your computer. You may need to contact your IT administrator to obtain this information.
2. You must install the ActiveX® in order to access your system. Click the attention bar at the top of the main page and select Install ActiveX Control. DVR Net viewer will reset.
3. In the warning box click Install. The login page appears. Leave the password field blank (default). NOTE: If you have enabled passwords on your system, enter your USER or ADMIN password. However, only the ADMIN can change settings and options on the system.
4. Select LAN or INTERNET from the drop-down menu and click LOGIN.



Remote Surveillance Login Screen



Setup Required Prior to Remote Access

NOTE: Your system must be connected to your LAN or WAN, Windows and Internet Explorer must be configured as described in the previous sections *Configuring Windows "User Account Control"* and *Configuring Active X Control in Internet Explorer* and the DVR settings must have been setup properly as described in the *Network Setup for Remote Access* section before attempting remote access.

REMOTE ACCESS

REMOTE SURVEILLANCE

Remote Surveillance Main Screen:

Upon login, the Remote Surveillance main screen appears in your browser.



ITEM	FUNCTION	DESCRIPTION
1	Modes	Click LIVE, PLAYBACK, and SETUP
2	Main Screen	Main display screen for live viewing and playback
3	Time Stamp	Time stamp appears on each channel
4	Channel	Channel number appears in the top left corner
5	PTZ Control	PTZ control for any connected PTZ cameras (not included).
6	Functions	Click the icons to show/hide channels, take screen captures, and record
7	Display Modes	Click the icons to view channels in single-channel full-screen, quad, and split-screen configurations
8	Volume/Mute	Select a channel (outlined in red) and then click the bars to increase/decrease volume; click the icon to mute/ unmute volume.*

**Note: Audio capable cameras (not included) are required for audio recording on the system.*



REMOTE ACCESS

REMOTE SURVEILLANCE

Live Viewing Tab:

By default, Remote Surveillance opens in Live Viewing mode (split-screen).

To use Live Viewing:

1. Click LIVE at the top of the main screen.
2. Click the display mode icons to view the main screen in single-channel, quad, or split-screen configurations. You can also double-click a channel at any time to view it in single-channel.
3. Click  to show or hide all the channel windows.
4. Click  to start/stop manual recording to your PC on ALL channels. For more details see RECORDING.
5. Select a channel (outlined in red) and then click the audio bars to increase or decrease listen-in volume. Click the icon to mute/unmute.



Live Viewing Talk Function

NOTE: The Talk function is not supported.



Recording

NOTE: You will record video to your PC regardless of the recording mode on the system itself. By default, recorded files are saved in C:\DVR\[ip_address]\Record.

Recording




You can record video directly to your PC using the remote surveillance software.

To record video to your PC, from Live viewing, click to start/stop manual recording to your PC on ALL channels

Quick Access Menu

Right-click any channel to open the sub-menu.

The sub-menu contains the following options:

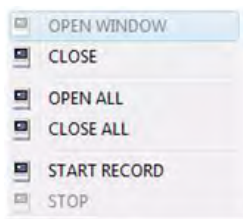

Remote Viewing-
Quick Access Menu

PTZ Control

You must have a PTZ camera (not included) connected to the system in order to use the PTZ controls.


To control a PTZ camera:

1. Select the channel of the connected PTZ camera(s).
2. Click the navigation arrows to pan and tilt the camera.
3. Click + /- to control zoom, focus, and iris.
4. Enter presets.
5. Click SETTING, HAND, and CLEAR to further control presets.

Screen Captures

Use the remote surveillance software to take a snapshot of the channels on the main display screen. Screen Captures can be useful for your own records, or may be needed by authorities in case of a security incident.

To take a screen capture:


1. From Live Viewing, select the channel you want to capture. The selected channel will be highlighted in a red frame.
2. Click .
3. Click OK in the confirmation window. Screen captures are saved as BMP files to the default save location (C:\DVR\...).



Remote Viewing -
PTZ Control

Playback Tab


Use the Replay menu to search and playback recorded video on your system.

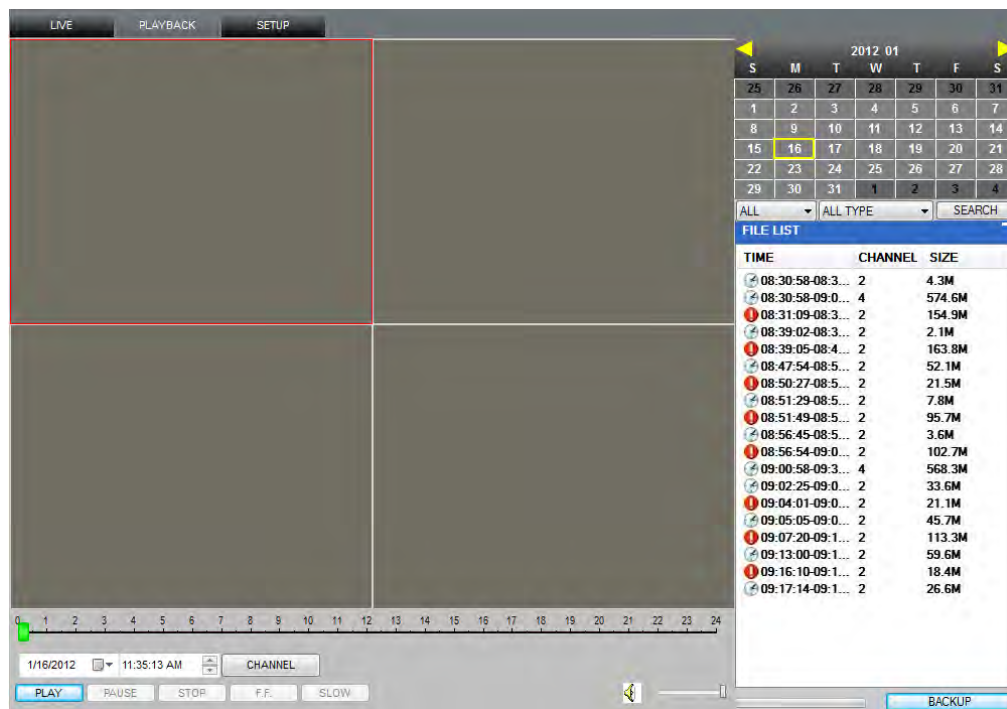

Remote Viewing-Playback Screen

To use the replay menu:

 1. Click REPLAY at the top of the main screen. The main screen will be grey.
2. Click REFRESH below the calendar to view the recorded files for the current month. NOTE: Normal recording is indicated by a clock icon; alarm recording (alarm, loss, and motion events) are indicated by an exclamation mark icon.
3. Double-click a file from the File List to playback the file in the main screen. The icon in the file list changes to "▶". Control playback using the buttons at the bottom of the main screen.



Remote Viewing-Progress Bar

The purple bar indicates the download progress. The green marker indicates playback progress. You can click and drag the playback marker (will turn from green to orange) to advance or rewind playback as needed. Click Play, Pause, Stop, Fast Forward, Slow and Next Frame to perform those functions.

REMOTE ACCESS

REMOTE SURVEILLANCE

Search

Use the calendar and drop-down menus to search for recorded video on your system.


1. Click < > to change the month on the calendar. Dates with recorded video data will appear in bold.
2. Click the date. Recorded video files will populate the File List.
3. From the Channel drop-down menu, select a specific channel or select ALL CHANNEL and then click SEARCH.
4. From the Type drop-down menu, select COMMON (normal recording), ALARM, or ALL TYPE and then click SEARCH.
5. Double-click the file from the File List to playback the file in the main screen.

Remote Backup

You can backup recorded video files from your system to your PC using the Replay menu in the remote surveillance software.

To backup files remotely:

1. Click PLAYBACK at the top of the main screen.
2. Double-click a file from the File List to begin playback.
3. Click BACKUP. Backup begins to C:/DVR/[ip_address]/Backup NOTE: If you playback a file, you must wait for the file to load before backing it up otherwise you may receive an error message

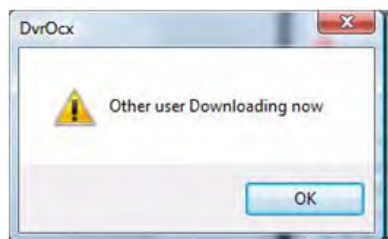


Remote Viewing-Error Message

4. When file backup is complete, click OK in the confirmation window. The confirmation window show the save path of the backup file. NOTE: Backup files are saved as .264 files.




Player Software


NOTE: Use the Player Software included on the software CD to playback backed up video.

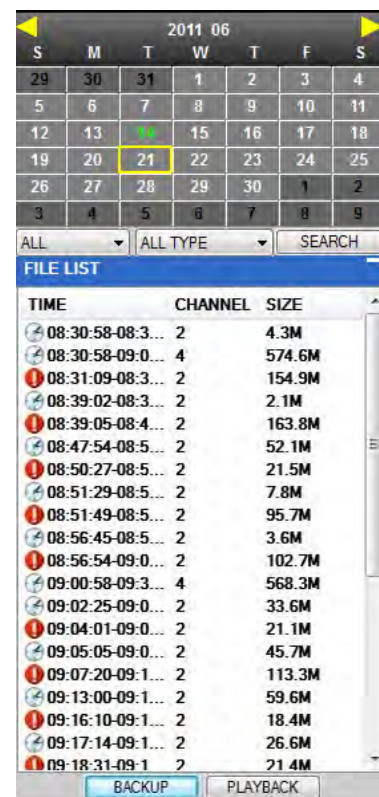

Remote Viewing-Search Calendar

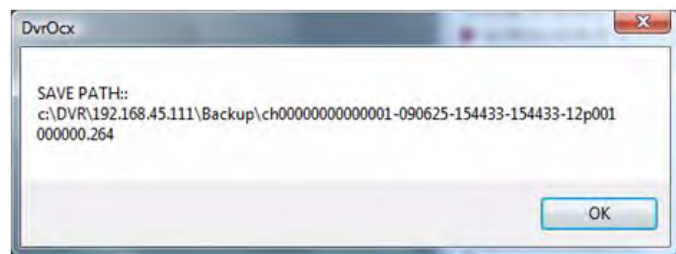

Remote Viewing-File backup Location

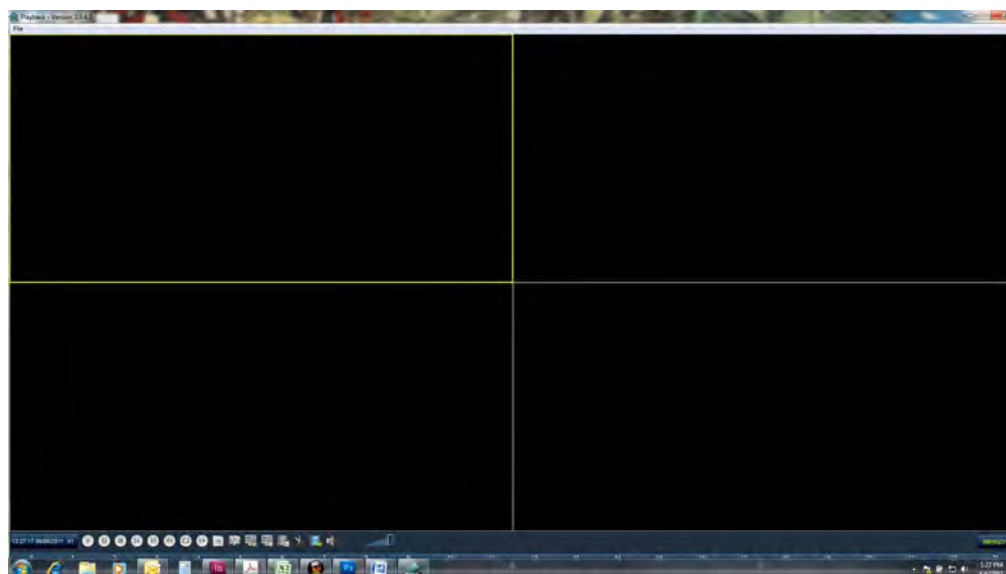

Remote Viewing-Playback Software

Setup Tab

Use the SETUP tab to configure the settings of your system from a remote location. NOTE: If the Main Menu is open on the system, you will not be able to make changes to the system from the remote location.

To open remote setup:

Click SETUP at the top of the main screen. The Remote Setup menu features the following tabbed options:

- RECORD
- ALARM
- PTZ
- NETWORK
- SETTING
- MAINTENANCE
- HOST INFO

RECORD

You can check and change the parameter settings as configured in the DVR.

Remote Setup - Record Screen

ALARM

You can check and change the parameter settings as configured in the DVR.

Remote Setup - Alarm Screen

PTZ

You can check and change the parameter settings as configured in the DVR.

Remote Setup - PTZ Screen

NETWORK

You can check and change the parameter settings as configured in the DVR.

Remote Setup - Network Screen

REMOTE ACCESS

REMOTE SURVEILLANCE

SETTING

You can check and change the parameter settings as configured in the DVR

1. **BANDWIDTH:** Set the bandwidth in kbps (128k, 192k, 256k, 384k, 512k, 1024k) that you want to allocate for traffic based on internet bandwidth available. This bandwidth does not include audio.
2. **FILE SAVE PATH:** The path where you want to save captured picture and recording video.

Remote Setup - Setting Screen

MAINTENANCE

You can check and change the parameter settings as configured in the DVR along with rebooting the system and upgrading firmware.

1. **TELECONTROL:** Remote reboot DVR or format HDD.
2. **REMOTE UPGRADE:** Remote upgrade DVR firmware.

Remote Setup - Maintenance Screen

HOST INFO

This interface allows you to view system information such as HDD status, remain record time, firmware version and MAC Address. All the information is for viewing only and cannot be changed remotely.

Remote Setup - Host Info Screen

MOBILE PHONE

Mobile Setup

Mobile Setup allows you to send alerts to your cellular phone running Windows Mobile Pro, Android, Blackberry, or iPhone on 3G networks. To get the latest software it is recommended that from your phone you go to your App Store or Market icon and search for the MEye application.

Step1: Configure DVR - For all phones configure MOBILE settings as follows:

1. From the MAIN Menu click ADVANCED then MOBILE.
2. Under MOBILE NETWORK, select 3G, 2.75G, or 2.5G. NOTE: Contact your cellular provider if you are unsure about the network of your cellular phone.
3. Under MOBILE PORT, enter your mobile port number. Note: this should be port 100 you forwarded from your router.
4. Click APPLY. Click OK in the confirmation window.
5. Click EXIT in all menus until all windows are closed.



Mobile Setup

Step 2: Configure Your Phone

1. From your phone go to your App Store or Market. Search for the MEye application.
2. Download and Install the App.
3. Go to the settings screen. (See below for examples of iPhone, Android, Windows and Blackberry phones. Your screens may vary.)
 - Enter a name
 - Enter your IP address for your computer (not the DVR IP address). You can easily get your IP address as described in Network Setup - Static IP or by going to www.whatismyip.com. Note: For business applications, firewalls may restrict or mask the true IP address of your computer. You may need to contact your IT administrator to obtain this information.
 - Enter 100 in the Port box.
 - Click OK or Back to save the information.




MEye Application
Icon




iPhone Settings Screen



Android Settings Screen

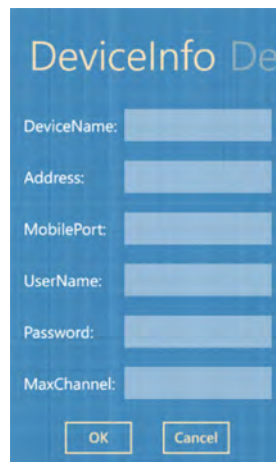

Windows Phone-
Settings Screen

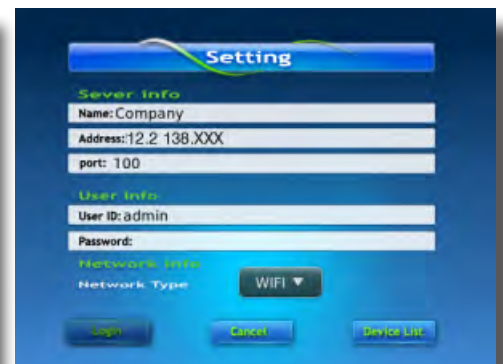

Blackberry Phone - Settings Screen




Mobile Access

NOTE! Before you can use Mobile Access you need to setup the network configuration on the DVR and forward port 100 as described in the "Port Forwarding" section of this manual.


MOBILE PHONE SETUP AND CONTROL

Mobile Setup-continued


4. Go to the Main Screen and start the session by selecting the Play button. Select a Channel number to view each connected camera. Depending on your setup and phone you can control PTZ cameras and other functions. See your application for available features. Below are screen shots from various phones.

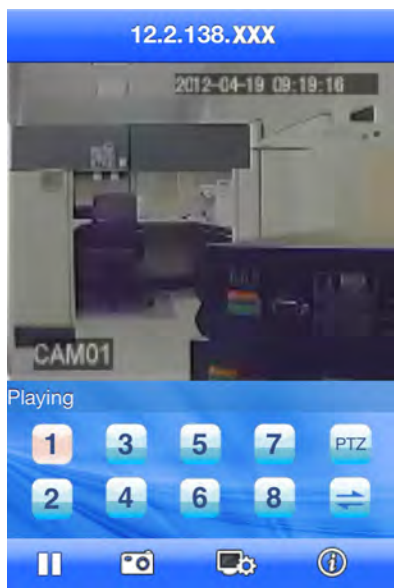


iPhone Main Screen

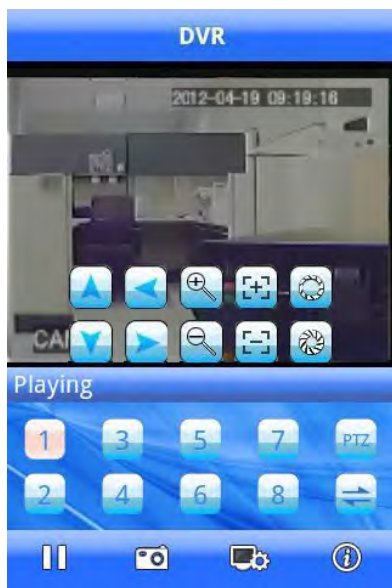

Android Main Screen

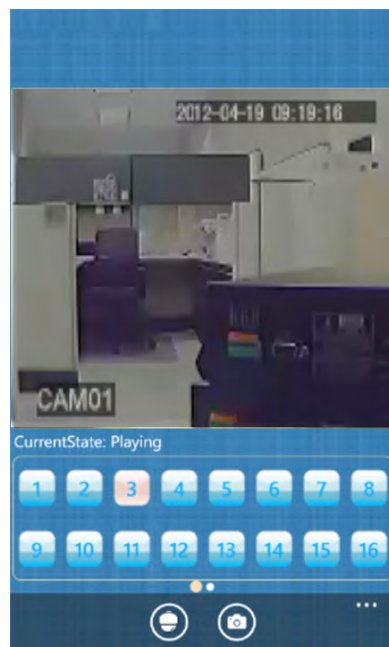

Windows Phone Main Screen

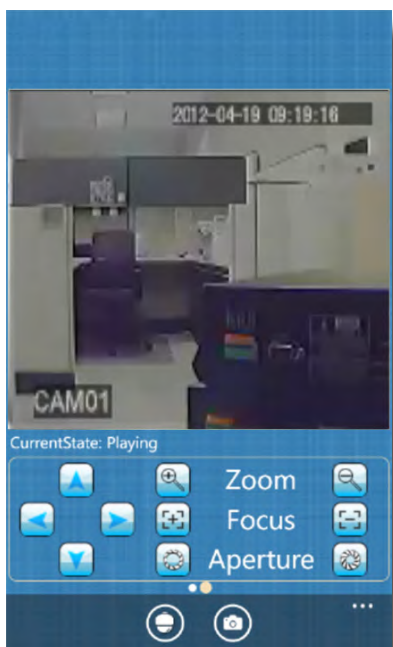

Windows Phone PTZ Screen



Blackberry Phone - Main Screen

HARD DRIVE REMOVAL AND INSTALLATION

HDD Installation

To replace the hard drive in the DVR:

1. CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK. UNPLUG ALL POWER SOURCES, INCLUDING CAMERAS FROM THE DVR BEFORE REMOVING COVER. FAILURE TO DO SO CAN RESULT IN DAMAGE TO THE DVR OR ITS COMPONENTS AS WELL AS INJURY OR DEATH
1. Remove screws securing the cover of the DVR and remove cover
2. Disconnect the hard drive power and data cables
3. Remove the screws securing the hard drive to the chassis.
4. Remove old hard drive and replace with the new one.
5. Re-install the screws securing the hard drive to the chassis.
6. Re-connect the hard drive power and data cables.
7. Replace the cover and screws. Note: Format hard drive per instructions in HDD MANAGEMENT section.



Caution!

When working with electrostatic sensitive devices such as hard disk or DVR unit, make sure you use a static-free workstation. Any electrostatic energy coming in contact with the hard disk or DVR can damage it permanently.



Hard Drive Format

NOTE: A new hard drive must be formatted after installation. Format per instructions in the HDD MANAGEMENT section of this manual.



CAUTION!

RISK OF ELECTRIC SHOCK




CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK. UNPLUG ALL POWER SOURCES, INCLUDING CAMERAS FROM THE DVR BEFORE REMOVING COVER. FAILURE TO DO SO CAN RESULT IN DAMAGE TO THE DVR OR ITS COMPONENTS AS WELL AS INJURY OR DEATH.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.




The exclamation point within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

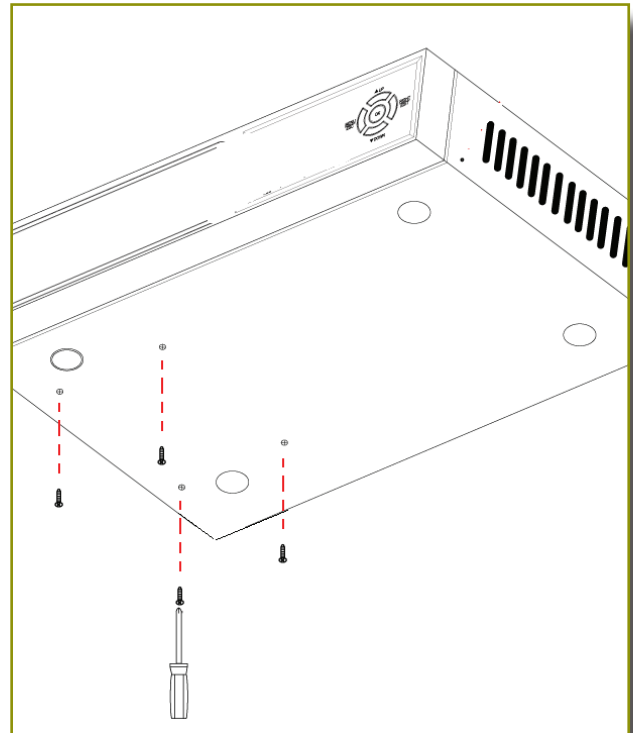

Hard Drive Remove/Install Screws from Below



Hard Drive - Remove/Connect Cables

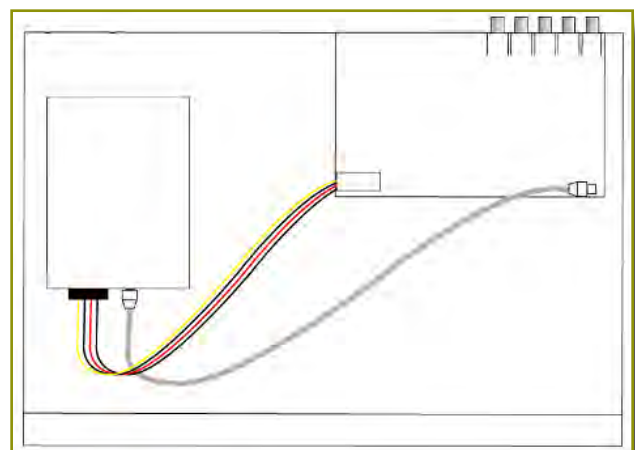

Hard Drive - Connected to Circuit Board

APPENDIX

SPECIFICATIONS

TECHNICAL SPECIFICATIONS

ITEM	DEVICE PARAMETER	SPECIFICATION
SYSTEM	Language	English/Spanish/French/Chinese
	GUI	16 Bit Graphic menu (OSD Menu)
	Password	User password, Administrator password
VIDEO	Video in	16ch composite video input 1.0Vp-p, impedance 75Ω, BNC
	Video out	1 VGA, 1 BNC (CVBS)
	Video display	16-channel: 1/4/9/16 channel
	Video standard	PAL, 25 f/s, CCIR 625line, 50 scene NTSC, 30 f/s, CCIR 525 line, 60 scene
AUDIO	Audio input	2-ch audio input, impedance 600Ω, RCA
	Audio output	1-ch audio output, impedance 600Ω, RCA
	Record style	Audio video recorded simultaneously
	Audio compression	ADPCM
PICTURE PROCESSING AND STORAGE	Picture compression	H.264
	Picture resolution	CIF
	Audio style	ADPCM
	Video code rate	CIF: 384~768 Kbps
	Audio code rate	32 KB/s
ALARM	Data storage	One 1 TB SATA HDD included, up to 2 TB capable
	Alarm input	4 alarm inputs
	Alarm output	2 alarm outputs
CONNECTOR	Serial interface	Supports 2 RS485
	PTZ interface	Supports PELCO-D, PELCO-P
	Mouse	Mouse USB 1.1
	Data	USB 2.0
	Network interface	RJ45, 10M/100M
VGA	VGA output	Supports 800 x 600, 1024 x 768, 1280 x 1024, 1366 x 768, 1440 x 900 resolution
SOFTWARE UPGRADE	USB	Supports USB firmware upgrade
OTHER	Voltage input	AC:110~240V, DC 12V
	Power Consumption	6W without HDD
	Working temperature	14 °F to 122 °F (-10 °C to 50°C)
	Video impedance input	75Ω each channel
	Video output	1Vp-p CVBS signal

NOTES AND IMPORTANT DATA

Notes

Write down important data, passwords, IP addresses, etc. for your DVR.

ITEM	DEVICE PARAMETER	DATA
USER NAME PASSWORDS	Admin	Name: Password:
	User 1	Name: Password:
	User 2	Name: Password:
	User 3	Name: Password:
	User 4	Name: Password:
	User 5	Name: Password:
NETWORK SETUP	Media Port	
	Web Port	
	Mobile Port	
	DNS	
	IP Address - DVR	
	IP Address - Computer	
	Subnet Mask	
	Gateway	
	DDNS Host Name	
	DDNS User Name	
	DDNS Password	

FAQ'S

If your problem is not listed below, please call our toll-free number for more support. Tech Services: 800-323-9005.

Question: Why is the DVR not working after starting?

Answer:

- Check the power adaptor input
- Check the on-off power line, is it well-connected?
- Check the power on-off switch on the back of the unit
- Check the main board of DVR is connected properly

Question: Why is the DVR rebooting automatically or stopping for several minutes after starting?

Answer:

- Instability or low input voltage
- Bad track on hard drive or the hard drive is bad
- Insufficient power supply
- Instability of the front-end video signal
- High temperature, too much dust, bad DVR operating environment
- Check to make sure the main board connector is secure
- The hardware of DVR is defective

Question: Why is there no video output on single, multi or all channels?

Answer:

- Please check the adaptor of camera whether to see if it is well-connected
- Please check the cable for connecting video input/output in the back panel of DVR
- Please insert the video source directly into the display device and check if they are causing the problem.
- Check the brightness of the picture and bring it back to its original default setting
- No video input signal or too weak
- The DVR hardware is defective

Question: Why can't the DVR record after startup and why is there an "H" showing on the screen?

Answer:

- Make sure power adaptor is DC 12V
- Make sure hard drive is formatted
- Check the power and data connection cables of the hard drive
- The hard drive is defective
- The SATA port is not working

Question: What is the meaning of the letters "R", "M", "I" and "H" showing on the screen?

Answer:

- "R" means the channel is recording
- "M" means motion detection on the channel
- "I" means alarm on the channel
- "H" means either the hard drive is not installed, it is bad or full or needs formatting

Question: Why is the DVR having a problem with real-time images, such as bad image color or serious brightness distortion?

Answer:

- If PAL and NTSC are not correctly selected, the images will be in black and white and rolling
- DVR is not compatible with monitor
- The video transmission distance (cable run) is too long. You may need to upgrade to RG59 Coax BNC/DC Power cables for runs longer than 60 feet.
- The setting of DVR color settings need to be adjusted

Question: Why is there no audio sound when monitoring?

Answer:

- Check sound box or speaker functions. Also check possible short circuit.
- Audio source may be connected to the video channel. You can click to full-screen to check.
- The hardware of DVR is defective
- Cameras are not audio capable or no powered microphone is connected.
- Mute is enabled

Question: Why is there no audio during playback?**Answer:**

- Audio settings not correct: open audio-video item and check the audio to see if it is closed in playback interface

Question: Why is my system time not correct?**Answer:**

- Wrong setting or user did not click "Edit" to confirm
- Circuit Board battery is not connected properly
- Circuit Board battery is dead. Please change.

Question: Why does the "Stop recording" function on the Quick Access Menu or Remote Control not work?**Answer:**

- The "Stop recording" by the right mouse button is for Manual Recording only. It can not stop recording when it is on a set schedule or on motion recording. If you want to stop a scheduled recording, please make changes in the RECORD menu.

Question: Why is motion detection not working?**Answer:**

- The setting of motion detection area is not correct
- Sensitivity is too low
- Record SWITCH is turned off for that channel (RECORD Menu)

Question: Why do I have a USB device error?**Answer:**

- The data exceeds the capacity of backup device
- The backup device is incompatible
- The backup device is damaged

Question: Why does the Remote Control not work?**Answer:**

- The remote control is not for this DVR
- The distance of remote control is too far or the angle is too great
- Remote control batteries are dead or low
- Remote control is damaged or the receiver port on the front panel of DVR is damaged or blocked

Question: Why can't I log in over the Internet?**Answer:**

- Please check the network to see if it is connected. Check if LINK or 100M LED is displayed normally on the panel; use ping xxx.xxx.xxx.xxx (DVR IP) to check if the Internet is linked properly.
- Make sure you are running Windows 7, Vista or XP operating system and Internet Explorer 6.0 - 8.0
- ActiveX control has been blocked. Please manually install ActiveX control again.
- Please install DX8.1 and upgrade your video card driver

Question: Why is there is no picture or picture is not clear when I preview the recording or playback the recording via Internet Explorer?**Answer:**

- Please choose "WAN" in "web environment"
- Try opening and closing windows again by right clicking the mouse button

Question: Why am I receiving a message indicating "other members are setting....." when accessing my DVR settings through Internet Explorer**Answer:**

- Someone else is setting the DVR or the Main Menu is open on the DVR. Close the DVR configuration interface or exit the DVR.

Question: Why do I get a message stating "Not Enough Resources" when I have not exceeded the 480 frame rate total for NTSC recording?**Answer:**

- Although the chipset is the standard NTSC 480, part of the resources are used for other internal functions and cannot be allocated to recording resources. A frame rate of 420 fps is the maximum that can be allocated.

TROUBLESHOOTING

ERROR	POSSIBLE CAUSE	SOLUTIONS
System is not receiving power or is not powering up	Cable from power adapter is loose or is unplugged	<ul style="list-style-type: none"> Confirm that all cables are connected correctly Confirm that the power adapter is securely connected to the back of the unit
	Cables are connected, but system is not receiving sufficient power	<ul style="list-style-type: none"> Confirm that the system is powered on (LED indicators on the front should be ON) If the unit is connected through a power bar or surge protector, try bypassing the bar and connecting the power directly to the wall outlet Confirm that there is power at the outlet <ul style="list-style-type: none"> Connect the power cable to another outlet Test the outlet with another plugged device
Remote control not detected by the system	Battery in the remote control is drained or is missing	<ul style="list-style-type: none"> Install two fresh AAA alkaline batteries in the remote control
Hard drive is not detected by the system	Hard Drive is not formatted	<ul style="list-style-type: none"> Format the hard drive per instructions
	Hard drive cables are loose or not properly connected	<ul style="list-style-type: none"> Remove the housing and check that hard drive cables are firmly connected
	There is no hard drive in the system	<ul style="list-style-type: none"> Open the housing and install a 3.5 SATA hard drive
Hard drive is full (0% remaining) and the unit is no longer recording	Overwrite is not enabled	<ul style="list-style-type: none"> From the Main Menu, select HDD>Overwrite>Enable and click Apply
Mouse is not detected by system	Mouse cable is not connected or is not firmly connected to the system	<ul style="list-style-type: none"> Firmly connect the mouse cable to the USB Mouse port (not the USB Data port) on the front panel.
	System needs to be reset	<ul style="list-style-type: none"> Power off the system (Turn power switch off position on back of unit). Firmly connect a USB mouse to the USB Mouse port on the front panel of the system. Power on the system (Turn power switch to on position on back of unit).
There is no picture on selected channels/camera picture is not being displayed	Camera cables are loose or have become disconnected	<ul style="list-style-type: none"> Check the camera video cable and connections Disconnect and reconnect the cable at the system and at the camera Try moving the camera to another channel or use another cable
The image on the DVR appears but does not have sound	Audio cables are loose or have been disconnected	<ul style="list-style-type: none"> Check the AUDIO connections to the DVR
	Audio channels are disabled the system menu	<ul style="list-style-type: none"> Check the Configurations: Main Menu>Record>Audio
	Volume on external speakers (not included) is low or off	<ul style="list-style-type: none"> Increase volume on external speakers (not included)
	Cameras are not audio capable or a powered microphone is not attached	<ul style="list-style-type: none"> Add audio capable cameras or a powered microphone (not included with this kit)
The system beeps at startup	The beep at startup is normal	<ul style="list-style-type: none"> No action required
I am not receiving e-mail notifications	E-mail notification is disabled	<ul style="list-style-type: none"> Open Main Menu>Advance>Alarm; click E-MAIL SETUP; under E-MAIL select ON
	Default setting is disabled and /or you have not entered your own SMTP information	<ul style="list-style-type: none"> If you want to use your own SMTP server, deselect the Default box, and enter your SMTP Server Address, Port, User name, and Password in their respective fields

WARRANTY

PRODUCT LIMITED WARRANTY

BRK Brands, Inc., ("BRK") the maker of First Alert® brand products warrants that for a period of one year from the date of purchase (the "Warranty Period"), this product will be free from defects in material and workmanship. BRK, at its sole option, will repair or replace this product or any component of the product found to be defective during the Warranty Period. Replacement or repair will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser only from the date of initial retail purchase and is not transferable. In order to obtain warranty service, you must keep the original sales receipt and proof of purchase in the form of the UPC code from the package. BRK dealers, service centers, or retail stores selling BRK products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

WARRANTY EXCLUSIONS

Parts and Labor: 1 year limited (warranted parts do not include bulbs, LEDs, and batteries)

This warranty does not apply to bulbs, LEDs, and batteries supplied with or forming part of the product.

This warranty is invalidated if non- BRK accessories are or have been used in or in connection with the product or in any modification or repair is made to the product.

This warranty does not apply to defects or damages arising by use of the product in other than normal (including normal atmospheric, moisture and humidity) conditions or by installation or use of the product other than in strict accordance with the instructions contained in the product owner's manual.

This warranty does not apply to defects in or damages to the product caused by (i) negligent use of the product, (ii) misuse, abuse, neglect, alteration, repair or improper installation of the product, (iii) electrical short circuits or transients, (iv) usage not in accordance with product installation, (v) use of replacement parts not supplied by BRK, (vi) improper product maintenance, or (vii) accident, fire, flood or other Acts of God.

This warranty does not cover the performance or functionality of any computer software included in the package with the product. BRK makes no warranty that the software provided with the product will function without interruption or otherwise be free of anomalies, errors, or "Bugs." This warranty does not cover any costs relating to removal or replacement of any product or software installed on your computer.

BRK reserves the right to make changes in design or to make additions to or improvements in its products without incurring any obligations to modify any product which has already been manufactured. BRK will make every effort to provide updates and fixes to its software via its website. This warranty does not cover any alteration or damage to any other software that may be or may become resident on the users system as a result of installing the software provided. This warranty is in lieu of other warranties, expressed or implied, and BRK neither assumes nor authorizes any person to assume for it any other obligation or liability in connection with the sale or service of the product. In no event shall BRK be liable for any special or consequential damages arising from the use of the product or arising from the malfunctioning or non-functioning of the product, or for any delay in the performance of this warranty due to any cause beyond its control.

BRK does not make any claims or warranties of any kind whatsoever regarding the product's potential, ability, or effectiveness to prevent, minimize, or in any way affect personal or property damage or injury. BRK is not responsible for any personal damage, loss, or theft related to the product or to its use for any harm, whether physical or mental related thereto. Any and all claims or statements, whether written or verbal, by salespeople, retailers, dealers, or distributors to the contrary are not authorized by BRK, and do not affect this provision of this warranty.

BRK's responsibility under this, or any other warranty, implied or expressed, is limited to repair, replacement or refund, as set forth above. These remedies are the sole and exclusive remedies for any breach of warranty. BRK is not responsible for direct, special, incidental, or consequential damages resulting from any breach of warranty or under any other legal theory including but not limited to, loss profits, downtime, goodwill, damage to or replacement of equipment and property and any costs of recovering, reprogramming or reproducing any program or data stored in or used with a system containing the product accompanying software. BRK does not warrant the software will operate with any other software except that which is indicated. BRK cannot be responsible for characteristics of their party hardware or software which may effect the operation of the software included.

Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above Warranty Period. Some states, provinces, or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state, or province to province, or jurisdiction to jurisdiction.

OBTAINING SERVICE

If service is required, do not return the product to your place of purchase. In order to obtain warranty service, contact the Consumer Affairs Division at 1-800-323-9005, 7:30 a.m. – 5:00 a.m. Central Standard Time, Monday through Friday. To assist us in serving you, please have the model number and date of purchase available when calling.

After contacting the Consumer Affairs Division and it is determined that the product should be returned for Warranty Service, please mail the product to: BRK Brands, Inc., 3901 Liberty Street Road, Aurora, IL 60504-8122.

First Alert[®]

©2012 BRK Brands, Inc.
a Jarden Corporation Company (NYSE:JAH)
3901 Liberty Street Road, Aurora, IL 60504-8122
Phone: 630-851-7330 Tech Services: 800-323-9005
www.brkelectronics.com
M08-0403-002r4-2012